

USER GUIDE

9CH / 16CH MPEG4 Digital Video Recorder

Ver. 2.1




About this user guide

Before installing and using this unit, please read this user guide carefully.

Be sure to keep it handy for later reference.

The specification and information are subject to change without notice for quality improvement.

Safety Precautions

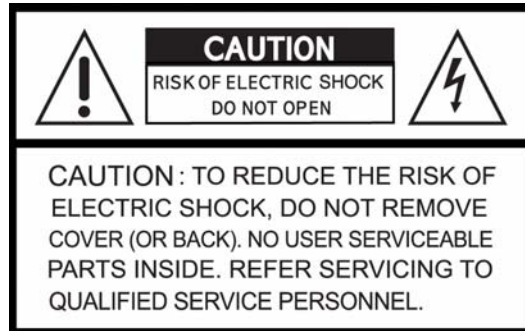

Explanation of Graphical Symbols



This symbol indicates the presence of important operating and maintenance (servicing) instruction in the literature accompanying the product.



This symbol indicates the presence of un-protected "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Cautions

This product has multiple-rated voltages (110v and 220v).

See installation instructions before connecting to the power supply.

This product uses a Lithium battery.

To avoid of risk of explosion, do not replace the battery on the main board by anything other than a Lithium battery. Dispose of used batteries according to the manufacturer's instructions.

This equipment and all communication wirings are intended for indoor use only.

To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.

Warnings

Installation and servicing should be performed only by qualified and experienced personnel.

Power off the DVR when connecting cameras, audio or sensor cables.

The manufacturer is not responsible for any damage caused by improper use of the product or failure to follow instructions for the product.

The manufacturer is not responsible for any problems caused by or resulting from the user physically opening the DVR for examination or attempting to fix the unit. The manufacturer may not be held liable for any issues with the unit if the warranty seal is removed.

Rack Mount Instructions

The following or similar rack-mount instructions are included with the installation instructions:

A) Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.

B) Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.







C) Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

D) Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.


E) Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips)."

Product Components

The package contains the main unit and its components as specified below. When you purchase the unit, please check to ensure the components specified below are included

DVR Set	
Client Software CD	
Remote Control	
Battery 1.5V (AAA x 2EA)	
User Guide	
Rubber ring & Screws	
Power Cable	
IDE HDD Cable (2EA)	
HDD Brackets (4EA)	
Rack Mount (2EA)-(Option) & Screw (6EA)	
Power Cord (110V or 220V)	

Video Signal Select & RS-422 / 485 Settings

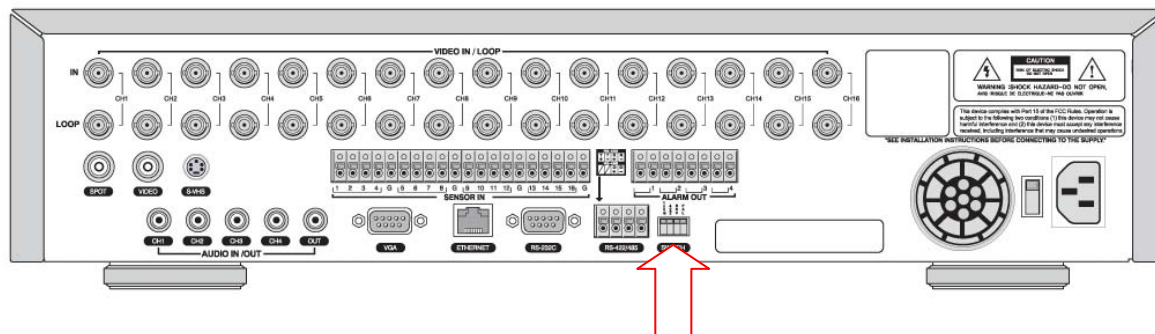


Video mode		Video output	
NTSC	PAL	BNC	VGA
T E S T 4 2 2 V G A P A L 	T E S T 4 2 2 V G A P A L 	T E S T 4 2 2 V G A P A L 	T E S T 4 2 2 V G A P A L
RS-422/485 Select		RS-485 Termination	
485	422	ON	OFF
T E S T 4 2 2 V G A P A L 	T E S T 4 2 2 V G A P A L 	T E S T 4 2 2 V G A P A L 	T E S T 4 2 2 V G A P A L

NOTICE

1. Do not change the setting when the power is on. When the switch is changed, the DVR should be rebooted to apply the new setting.
2. RS-485 Termination ON/OFF function is available on specific hardware version of the system. Please inquiry the manufacturer.

HDD Installation

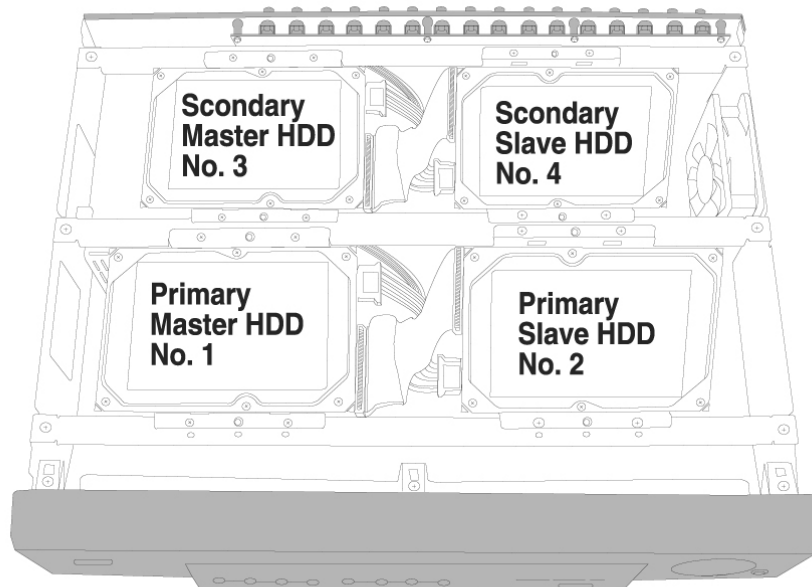


HDD Installation Order

1. Primary Master HDD NO.1
2. Secondary Slave HDD NO.2
3. Primary Master HDD NO.3
4. Secondary Slave HDD NO.4

NOTICE

The brands and models of all HDD should be the same. If the brands and models of each HDD are different with others, the DVR could not recognize HDD.

IDE HDD CABLE CONNECTION ORDER

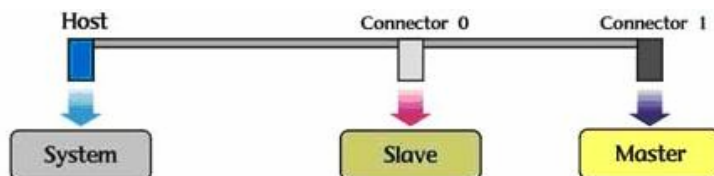

BLUE: MAIN BOARD

WHITE: SLAVE HDD

BLACK: MASTER HDD

Compatible HDD models

Company	Capacity	RPM	Buffer	Interface
HITACHI	80 GB	7200 RPM	2 M	E-IDE
	160 GB	7200 RPM	8 M	E-IDE
	250 GB	7200 RPM	8 M	E-IDE
	500 GB	7200 RPM	8 M	E-IDE
MAXTOR	80 GB	7200 RPM	2 M	E-IDE
	200 GB	7200 RPM	2 M	E-IDE
	250 GB	7200 RPM	8 M	E-IDE
	300 GB	7200 RPM	16 M	E-IDE
SAMSUNG	80 GB	7200 RPM	2 M	E-IDE
	160 GB	7200 RPM	2 M	E-IDE
Western Digital	160 GB	7200 RPM	2 M	E-IDE
	200 GB	7200 RPM	8 M	E-IDE
	250 GB	7200 RPM	8 M	E-IDE
	320 GB	7200 RPM	8 M	E-IDE
SEAGATE	40 GB	7200 RPM	2 M	E-IDE
	80 GB	7200 RPM	2 M	E-IDE
	120 GB	7200 RPM	2 M	E-IDE
	160 GB	7200 RPM	2 M	E-IDE
	300 GB	7200 RPM	8 M	E-IDE
	400 GB	7200 RPM	8 M	E-IDE
	500 GB	7200 RPM	8 M	E-IDE

Specifications

ITEM			DVR-9CH/16CH
Video	Input	Channel, Input Level	9/16CH, Composite 1.0Vp-p, 75 Ohm
		Signal Format	NTSC/PAL
		Video Loss Check	Yes
	Output	Main Monitor Output	1 CH BNC, 1 CH S-VIDEO, 1CH VGA
		Output Level	Composite 1.0Vp-p +_0.2, 75 Ohm
		Signal Format	NTSC/PAL & VGA
		Etc Output	9/16CH Loop-back , 1CH SPOT
Audio	Input & Output		4 CH Line input & 1 CH Line output
	Audio Codec		G.711
Alarm	Sensor Input		9/16 (NC/NO Selectable)
	Alarm Output		4
	Alarm Output		By Alarm, Motion, Video Loss
Recording	Compression		MPEG-4
	Multi-operation		TRIPLEX (Playback/Record/Network)
	Resolution	NTSC	352x240
			704x240
			704x480
		PAL	352x288
			704x288
			704x576
			Recording quality grade
	Recording Mode		Continuous / Schedule / Motion/ Sensor/ Manual
	Motion Detection		Motion detection setup by Grid
	Pre & Post Recording		Yes
Display			
Frame Rate (/Sec)			NTSC: 30fps/ch, 60 fields / PAL: 25fps/ch, 50 fields
Playback	Multi-Decoding		1, 4, 9, 16
	Playback Speed	Fast Forward / Reverse	× 2, 4, 8
	Search Mode		Event, Archive, Log

Storage	Internal HDD	Interface Type	EIDE/ATA133
		Capacity of 1 HDD	750GB
		Max HDD Number	4
	File system		NaFS: Own developed & Designed for never broken by any power failure
	Backup	USB 2.0 flash stick	Still Image & AVI
		External CDRW	Still Image & AVI
		Network	Moving picture & Still Image
User I/F	Menu Display		GUI
	Input Method		Front Keypad, Remote controller
Serial port	Console & External Modem		1 RS-232C (9pin D-SUB connector)
	Camera control		1 RS-485/422 (4 Terminal Block)
Network	Dynamic IP support		Yes
	Network Interface		10/100 base-T Ethernet (RJ-45)
Network Client S/W	Functions		Live, Search, Backup, PTZF Camera Control
	Central Monitoring System		Yes
Additional Functions	DLS (Day Light Saving)		Yes
	Multi-Language		Yes
	S/W Upgrade		USB 2.0 memory stick
Power	Power Source		100~127V/200~240V, 50-60Hz

Recording performances and resolutions per models

MODEL	Recoding performance (Max.)			
SDVR-9000C	NTSC	352x240: 120fps	704x240: 60fps	704x480: 30fps
	PAL	352x288: 100fps	704x288: 50fps	704x576: 25fps
SDVR-9200C	NTSC	352x240: 240fps	704x240: 120fps	704x480: 60fps
	PAL	352x288: 200fps	704x288: 100fps	704x576: 50fps
SDVR-16000C	NTSC	352x240: 120fps	704x240: 60fps	704x480: 30fps
	PAL	352x288: 100fps	704x288: 50fps	704x576: 25fps
SDVR-16200C	NTSC	352x240: 240fps	704x240: 120fps	704x480: 60fps
	PAL	352x288: 200fps	704x288: 100fps	704x576: 50fps
SDVR-16400C	NTSC	352x240: 480fps	704x240: 240fps	704x480: 120fps
	PAL	352x288: 400fps	704x288: 200fps	704x576: 100fps

TABLE OF CONTENTS

1. Features	13
2. Name, Function and Connection	14
2-1. Front Panel	14
2-2. Rear Panel.....	16
2-3. Remote controller	17
3. Setting Up the DVR	18
3-1. Setup – Main Screen	18
3-2. Setup – Live Mode.....	20
3-3. Setup – Recording Mode.....	21
3-3-1. Motion Zones	22
3-3-2. Recording Schedule.....	23
3-4. Setup – Device Mode	24
3-4-1. ALARM-OUT	25
3-4-2. PTZ Setup	26
3-4-3. SPOT-OUT	26
3-5. Setup – System Mode	27
3-6. Setup – Security Mode	30
3-7. Setup – Network Mode	31
3-7-1. Ports.....	32
3-7-2. Network types	33
3-7-2-1. LAN	33
3-7-2-1. DHCP	34
3-7-2-1. ADSL (PPPOE)	34
3-8. Setup - Storage Mode.....	35
3-9. Saving Setup	36
4. Live & Search	37
4-1. Live Window	37
4-2. SEARCH Window.....	38
4-3. Play mode.....	39
4-4. LOG Search.....	40
4-5. PTZ operation.....	40
5. Archiving Video into USB Memory Device	42
5-1. Capturing images or video.....	42
5-1-1. Still Image backup onto USB flash memory or CD media.....	42

5-1-2. Video backup onto USB flash memory or CD media	42
5-2. Transferring still images or video from the ARCHIVE list	43
5-3. Playback of Backup Video	44
5-3-1. Playback of backup video in AVI format	44
5-3-2. Playback of backup video in exclusive (NaFs) format.....	44
6. Upgrading Firmware	45
7. Network – By an exclusive viewer.....	46
7-1. Overview.....	46
7-2. Minimum PC requirements	47
7-3. Installing the program	47
7-4. Live viewer.....	48
7-5. Search and Playback Viewer.....	50
7-5-1. Backup	51
7-6. PC System configuration	51
7-6-1. General	52
7-6-2. Site	52
7-6-3. Event	53
7-6-4. Record.....	54
7-6-5. Disk	55
8. Network – By an web-browser viewer.....	56
8-1. Download Web Brower Viewer and Connection.....	56
8-2. Main Features.....	57
8-2-1. Live.....	57
-2-2. Search and Playback	58
APPENDIX.....	59
1. How to register DDNS (Dynamic Domain Name Server)	59
1-1. Setting of NETWORK Setup menu.....	59
1-2. Checking Mac address on the rear panel of DVR and Registration No.	59
1-3. Registration at DDNS.	60
2. Network access using Domain name	61

1. Features

- 9/16 channels real-time live display and 16channels simultaneous playback.
- MPEG-4 - Unbeatable recording picture quality and compression ratio has been tuned for years. It best fits for minimizing recording space and networking speed.
- TRIPLEX - Simultaneous Recording, Playback, and Networking
- NaFS (File System developed) - Designed & developed for preventing loss and broke of recording data by any power failure.
- Multiplexing operation
- Reliability - Real Time Operating System and simplified hardware as well as watchdog timer ensure the reliability.
- Individual channel recording and playback with different frame rate.
- High-quality live and playback resolution.
- Multi-site management - Supported by CMS application.
- Network features - Remote Live, Playback, PTZF Control, and Backup.
- Network via LAN, DHCP, ADSL (Dynamic and Static IP address).
- 4 channels audio recording.
- User-friendly setup menu with graphic user interface.
- Easy to schedule a complicated weekly recording plan.
- The OSD icons on screen provide various helpful and well-explained information.
- Motion detection – Grid 30x24 motion zone per camera is provided.
- USB ports for JPEG, MPEG data backup and software upgrade using USB flash memory stick.
- Still image capture and review as JPEG format.
- Internal Pan/Tilt/Zoom/Focus controller.
- Easy operating with the buttons on the front and the remote controller.
- User verification by password certification.
- Video loss detection.
- Backup - Still-images or AVI data into USB flash memory stick, USB CDRW, and Network.
- Variety of Hard Drive Sizes - up to internally 3TB (750GB HDD X 4) for long-term recording.
- Multi-Languages -User can easily select language from Setup menu.
- Various Video Output - VGA(800x600 24 Bit Color), S-VHS, SPOT

2. Name, Function and Connection

2-1. Front Panel

The following information will help you operate the front panel controls.

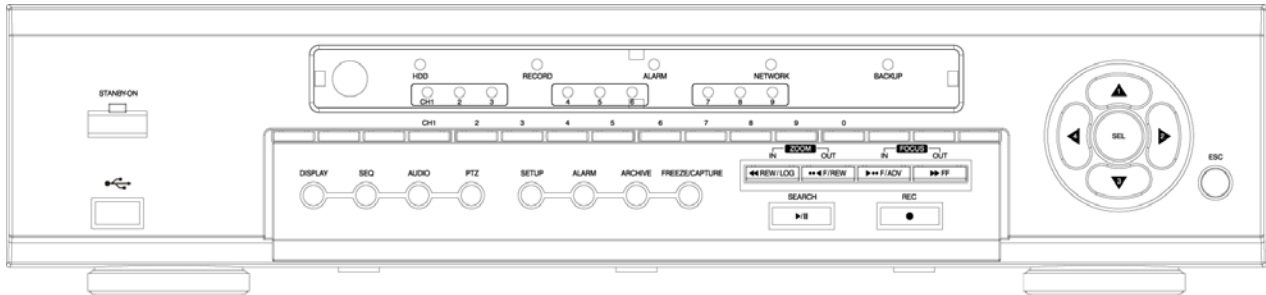


Figure 2.1.1. Front panel

Table 2.1.1. Indication lamps

Name	Description
HDD	LED light is on when the system is accessing hard disk.
REC	LED light is on when the system is recording video data.
ALARM	LED light is on when alarm sensor(s) is/are triggered or motion is detected.
NETWORK	LED light is on when client is connected to the system through the network.
BACKUP	LED light is on when USB storage device is stored images or video.

Table 2.1.2. Front panel buttons

Name	Description
POWER	Power ON/ OFF. If a password has set for power off in the SECURITY setup menu, the system will ask you the password when you press the POWER button.
DISPLAY	Press to select full, quad, 9 or 16 split screen in live display mode.
SEQ	Press to start auto sequencing of the screen in full or quad display mode.
AUDIO	Press to select audio mode. SINGLE, MIX, MUTE MUTE- All of 4 channels. SINGLE- Highlighted channel only. MIX- All of 4 channels.
PTZ	Press to control PTZ operation
SETUP	Press to launch SETUP menu.
ALARM	Press to enable/disable alarm operation.
ARCHIVE	Press to see the ARCHIVE LIST in live display mode.
FREEZE/ CAPTURE	Press to freeze and capture video in jpeg format in live or playback mode.

REW / LOG	Press to rewind the footage at 1x, 2x, 4x, and 8x speed in playback mode or to see the LOG LIST in live display mode.
F/REW	Jump/Step backward. In playback mode, the playback position moves 60 seconds backward.
F/ADV	Jump/Step forward. In playback mode, the playback position moves 60 seconds forward.
FF	Press to fast forward the footage at 1x, 2x, 4x, and 8x speed in playback mode.
SEARCH PLAY/PAUSE	Press to go to SEARCH menu in live display mode or to play and pause the footage in playback mode.
REC	Press to start or stop manual recording.
	Press to move up the menu items in setup mode. It is also used as the number 1 when entering password.
	Press to move right in the menu or to change the values in setup mode. It is also used as the number 2 when entering password.
	Press to move down the menu items in setup mode. It is also used as the number 3 when entering password.
	Press to move left in the menu or to change the values in setup mode. It is also used as the number 4 when entering password.
	Press to select desired menu item or to store the setup value in the setup menu.
ESC	Press for temporal storage of the changed value or to return to the previous menu screen.
USB Port	There is a USB Port located on the left side of the front panel. This USB port is used to archive footage into a USB storage device.

2-2. Rear Panel


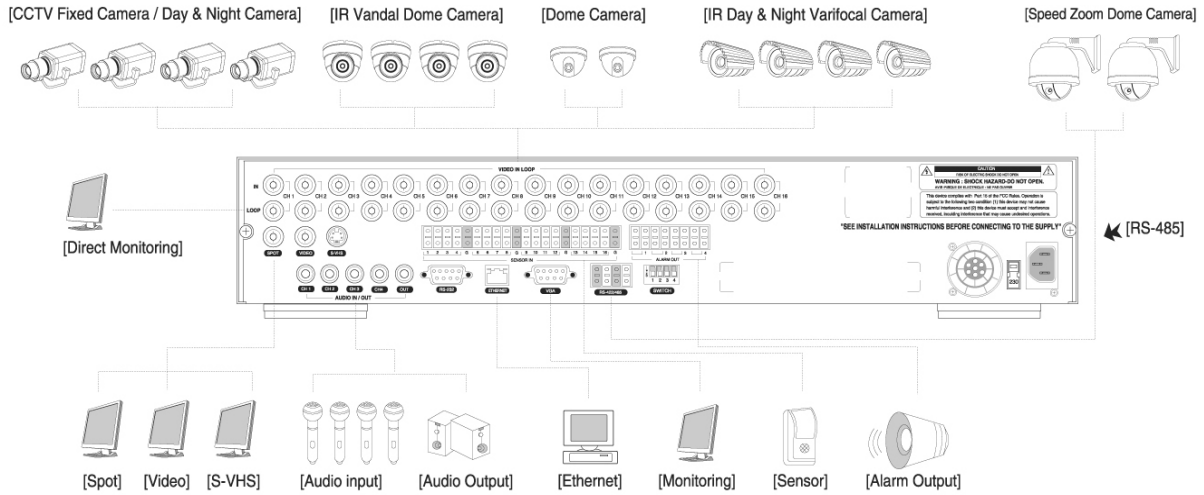


Figure 2.2.1. Rear Panel

Table 2.2.1. Rear panel connections

Connection	Purpose
VIDEO IN	9/16 connectors for video input. Connect camera output to Video-in (NTSC/PAL)
VIDEO OUT	9/16 connectors for video output.(loop back)
SPOT	Composite video output for spot monitoring.
VIDEO	Composite video output in NTSC or PAL format
S-VHS	S-VHS output
VGA	Connector for VGA monitor
AUDIO IN	4 connectors for audio input.
AUDIO OUT	1 connector for audio output.
RS-232	For engineering use only.
LAN	RJ45 connector for LAN connection.
RS-485/422	For camera control use.
SENSOR IN	Connector for sensor device connection.
ALARM OUT	4 connectors for alarm device connection. Provides simple On/Off switching by using relay. 0.5A/125V, 1A/30V
POWER	Connect AC115/230V power cable.

2-3. Remote controller

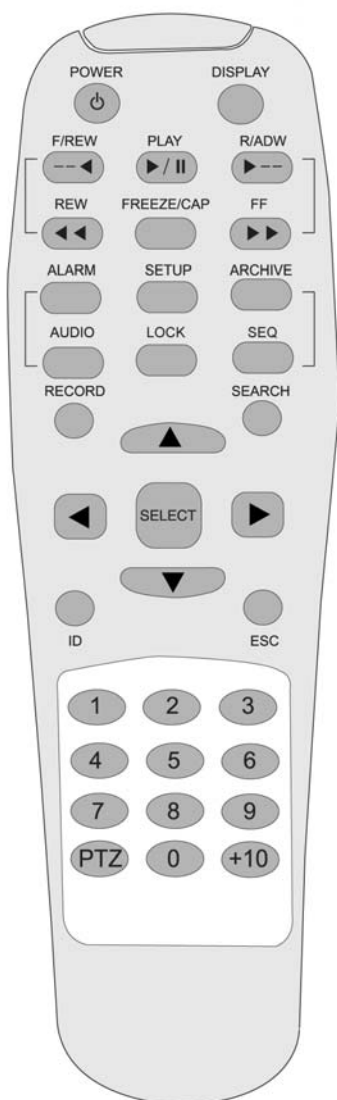

POWER	Power On/Off
DISPLAY	Display of Full, Quad or 9 split view
F/REW	Jump 60 seconds backward
PLAY	Play/Pause
F/ADV	Jump 60 seconds forward
FREEZE/CAP	Freeze/Capture
FF	Fast Forward
ALARM	Disable alarm operation
SETUP	Setup menu screen
ARCHIVE	Display archive list
AUDIO	Disable, Mute or Highlighted channel only
LOCK	Locks functions
SEQ	Sequence of Full or Quad view
RECORD	Manual recording
SEARCH	Search menu screen
DIRECTION	Direction or number 1 to 4
SELECT	Enter
ID	DVR ID (ID Button + DVR ID number)
ESC	Esc
PTZ	PTZ menu screen
NUMBER	Channel 1 to 9
+10	Channel 10 and channel 11 to16 10CH->press +10 and number 0 11CH->press +10 and number 1 12CH->press +10 and number 2 13CH->press +10 and number 3 14CH->press +10 and number 4 15CH->press +10 and number 5 16CH->press +10 and number 6

3. Setting Up the DVR

The following sections detail the initial setup of the DVR

3-1. Setup – Main Screen

When you press the SETUP button, the DVR will ask for a password. The default password is 1111, which can be entered by pressing the up button 4 times and then pressing the SEL button. We recommend you protect the system by assigning a new password immediately. The procedure for assigning a password is found in section 3.6. After a password has been assigned,

enter the password by using the  direction keys (representing 1, 2, 3, & 4), and then press the SEL button for the password validation. Once the password is entered, you will see the screen as shown in Figure 3.1.1. Navigate through the menu items and press the SEL button to enter the sub-category menu.

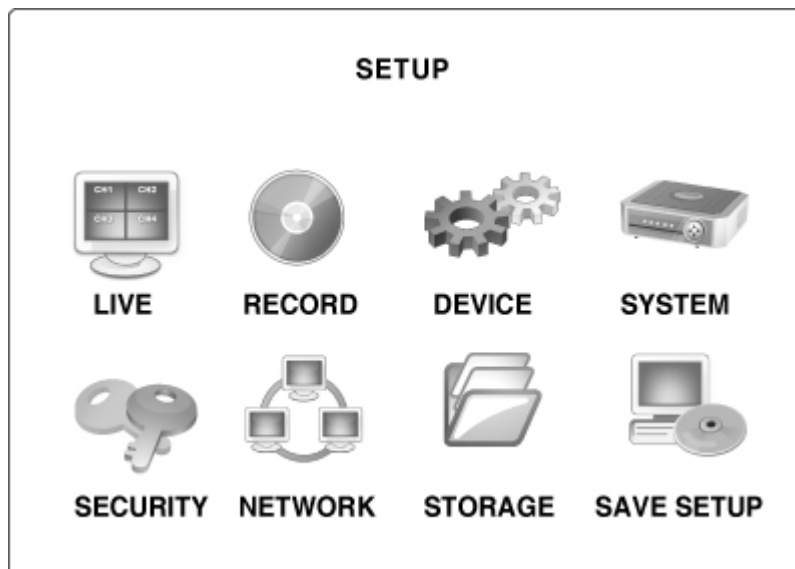


Figure 3.1.1. Setup menu screen

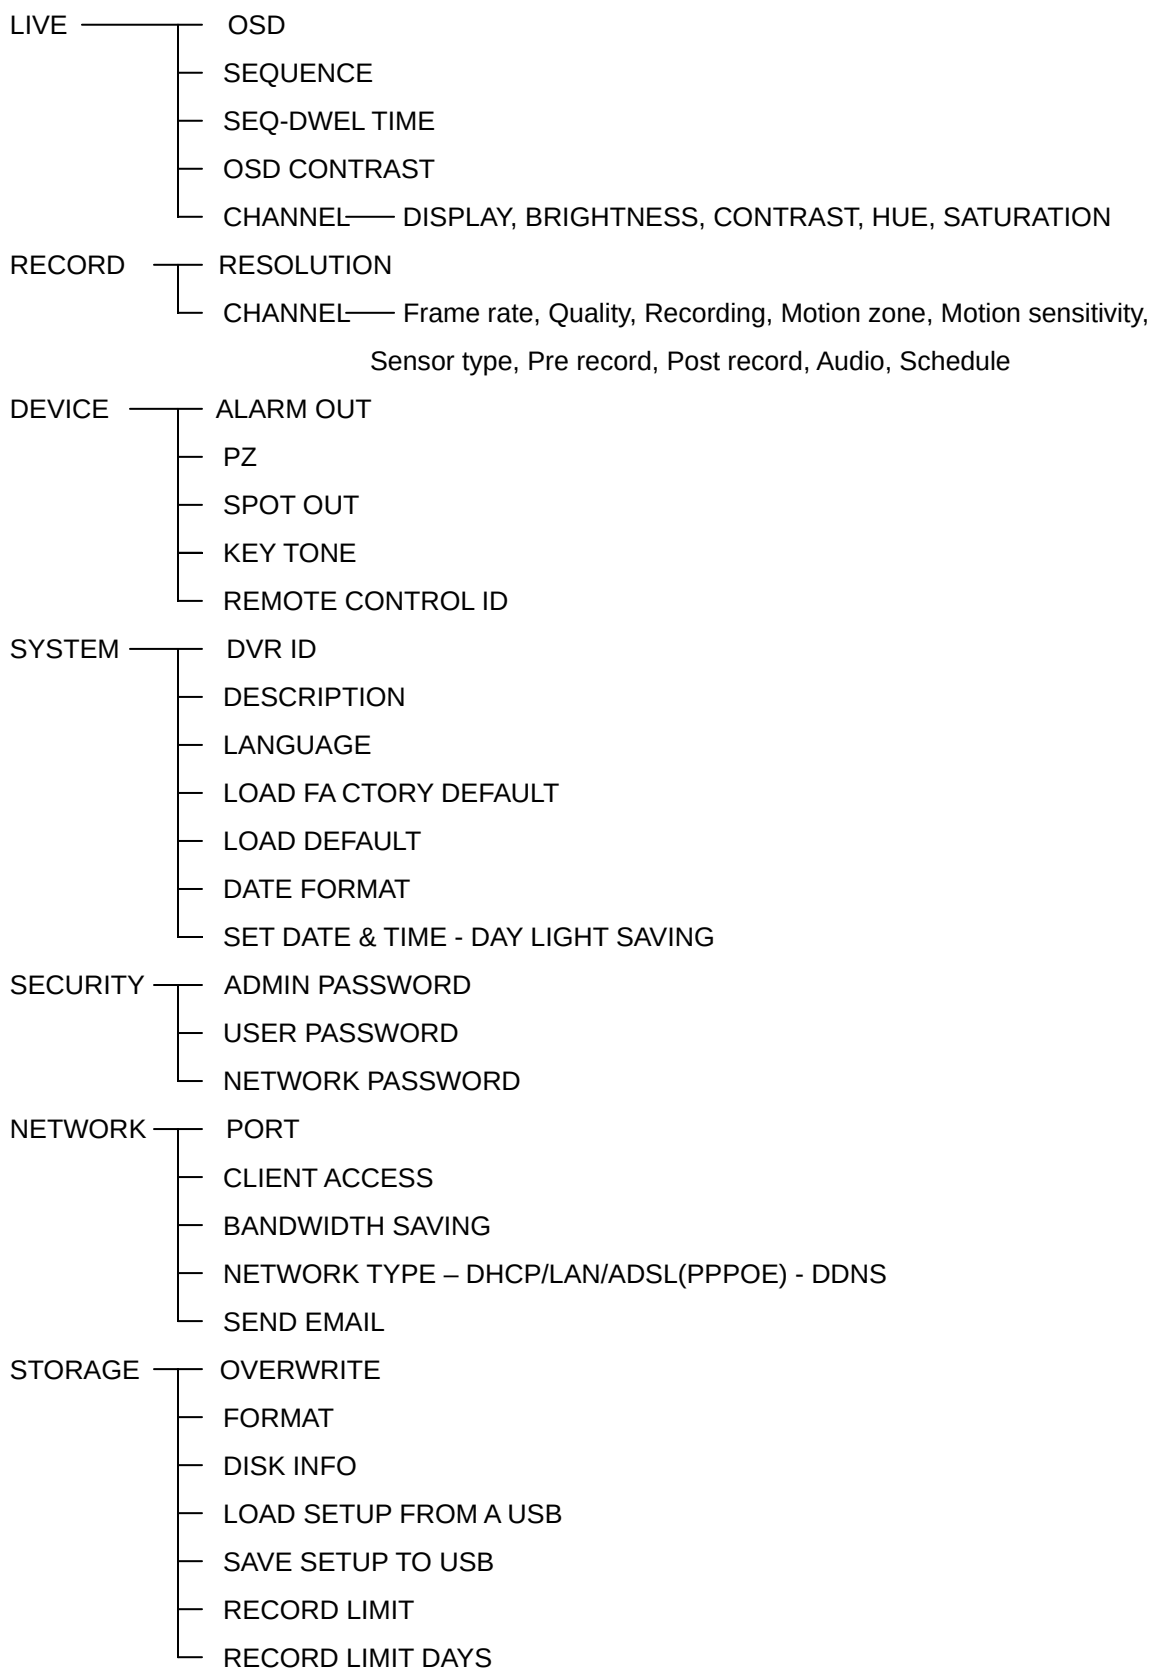


Table 3.1.1. Setup menu configuration

3-2. Setup – Live Mode

Set the values for live display. Navigate through the menu items by pressing the UP or DOWN button. The value of the menu item may be changed by pressing the LEFT or RIGHT button.

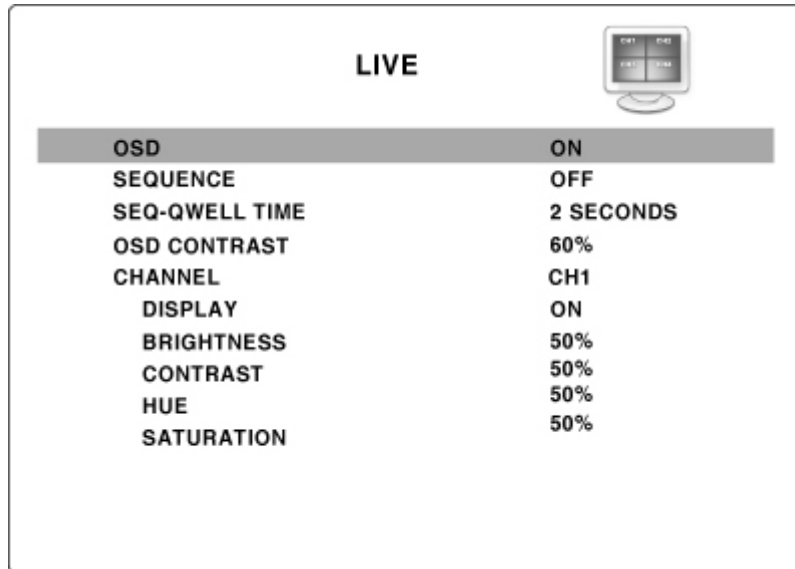


Figure 3.2.1. Live mode setup screen

Table 3.2.1. Menu items in LIVE mode setup

Item	Description
OSD	Enable/disable on-screen-display.
SEQUENCE	Enable/disable SEQ button
SEQ-DWELL TIME	Set the dwell time for each, 4 or 9 channels display in sequential display mode.
OSD CONTRAST	Set the visibility level of the On Screen Display (OSD)
CHANNEL	Select the channel for applying the following settings. Press SELECT to change channel name.
DISPLAY	Enable/disable display of the video channel in live display mode
BRIGHTNESS	Change the brightness value for the specified channel
CONTRAST	Change the contrast value for the specified channel
HUE	Change the hue value for the specified channel
SATURATION	Change the saturation value for the specified channel

3-3. Setup – Recording Mode

Set the values for recording video. Navigate through menu items by pressing the UP or DOWN button. User can change the value of the menu item by pressing the LEFT or RIGHT button.

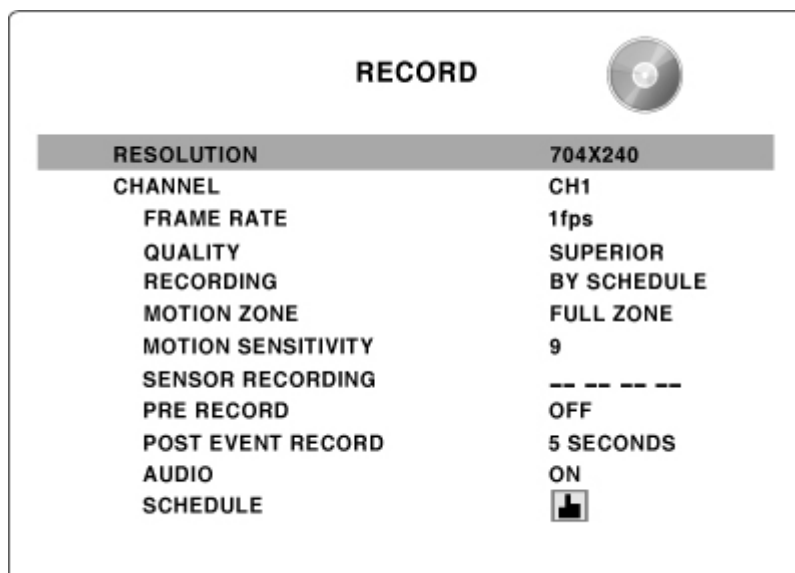


Figure 3.3.1. Recording mode setup screen

Table 3.3.1. Menu items in Recording mode setup

Menu item	Description
RESOLUTION	Set the resolution to either 704x480, 704x240, or 352x240 for NTSC. (PAL: 704*576/ 704*288/ 352*288)
CHANNEL	Select the channel to apply the following settings on. Changes you make will immediately take effect with the selected channel.
FRAME RATE	Set the frame rate for the specified channel. The sum of the frame rate values from each channel cannot exceed the maximum frame rates for a specific recording resolution. Typical values of the maximum frame rate for video are 120/100 fps version: 120/100fps: 352*240(NTSC)/352*288(PAL) 60/50fps: 704*240(NTSC)/704*288(PAL) 30/25 fps: 704*480(NTSC)/704*576(PAL) 240/200 fps version: 240/200fps: 352*240(NTSC)/352*288(PAL) 120/100fps: 704*240(NTSC)/704*288(PAL) 60/50 fps: 704*480(NTSC)/704*576(PAL)

	480/400fps version: 480/400fps: 352*240(NTSC)/352*288(PAL) 240/200fps: 704*240(NTSC)/704*288(PAL) 120/100 fps: 704*480(NTSC)/704*576(PAL)
QUALITY	Select the recording quality for the specified channel. Options are: Network, Standard, High, Super or Ultra.
RECORDING	Set a recording mode for each channel. Select one of Continuous, By Motion, By Sensor, By Schedule or Disable.
MOTION ZONE	Select Full Zone or Partial Zone for motion sensing.
MOTION SENSITIVITY	Set the motion sensitivity for the specified channel. Control the motion sensitivity from 1 to 9.
SENSOR RECORDING	Enable setting up to 4 sensors of 9 sensors for the specified channel.
PRE RECORD	Enable/disable pre-event recording. Pre-event recording time is 5 second and only intra-frames are recorded for pre-event recording.
POST EVENT RECORD	Set the post event recording time duration for the specified channel from 1 to 30 seconds.
SCHEDULE	Set the recording schedule.
NOTICE AUDIO is linked as bellows, 1CH AUDIO = 1CH VIDEO / 2CH AUDIO = 2CH VIDEO 3CH AUDIO = 3CH VIDEO / 4CH AUDIO = 4CH VIDEO	

3-3-1. Motion Zones

By selecting Partial Zone in the Motion Zone menu, user can set-up the motion sensing zones in the screen. Move around each rectangular zone using 4 direction key buttons and press SEL button to include the rectangular region as part of the motion sensing zone. The rectangular blocks included as part of the motion zone are indicated by changing the color of the blocks.

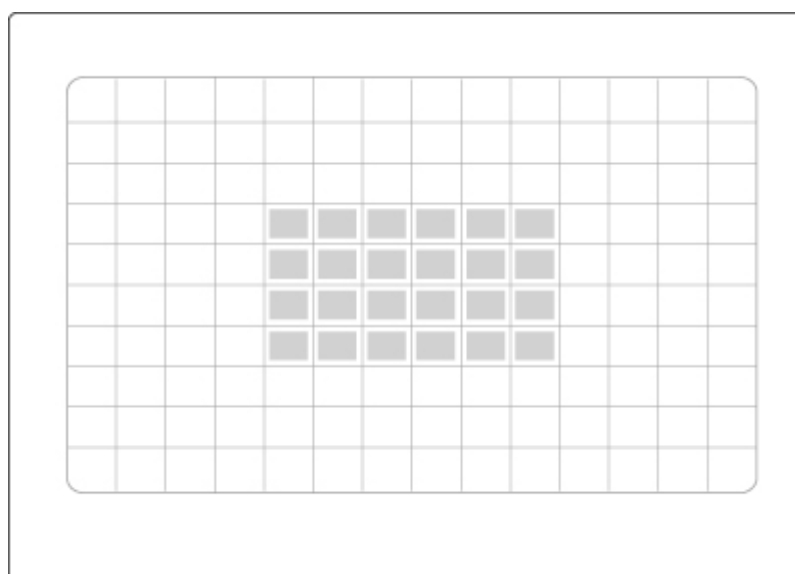


Figure 3.3.2. Motion Zone selection screen

3-3-2. Recording Schedule

To set up a recording schedule, select SCHEDULE in the RECORD menu.

Use the arrow buttons to navigate through the items and set the recording.

[**ALL**]: Selected recording mode using the SEL button is applied to the entire time zone and all channels.

[**SUN to SAT**]: Selected recording mode using the SEL button is applied to the entire time zone for the specified channel.

[**Vertical Bar “ | ”**]: Selected recording mode using the SEL button is applied to the entire channel for the selected time zone. Each vertical bar “ | ” corresponds to one hour.

[**- Individual Block of Time**]: Selected recording mode using the SEL button is applied to the selected 1-hour increment for the selected channel.

[**SEL**]: The recording mode such as C (continuous), M (motion), S (sensor) and disable mode can be selected by using the SEL button.

[**COPY FROM to COPY TO**]: Setup values of recording mode for the selected channel can be copied for another channel setup.

Table 3.3.2. Button functions in schedule Recording mode

Button	Function
REW	Use to set Continuous recording mode. → C
F/REW	Use to Disable recording setting.
PLAY/PAUSE	Use to enable Motion detection triggered recording. → M
FF	Use to enable Sensor triggered recording → S

SCHEDULE-CH1									
COPY FROM									
COPY TO	CH1								
	0	3	6	9	12	15	18	21	24
ALL									
SUN	-	.	.	.	.	.	.	.	.
MON	-	.	.	.	.	.	.	.	.
TUE	-	.	.	.	.	.	.	.	.
WED	-	.	.	.	.	.	.	.	.
THU	-	.	.	.	.	.	.	.	.
FRI	-	.	.	.	.	.	.	.	.
SAT	-	.	.	.	.	.	.	.	.

3-4. Setup – Device Mode

Set the values for device setting. Navigate through menu items by pressing the UP or DOWN button. User can change the value of the menu item by pressing the LEFT or RIGHT button.

DEVICE		
ALARM OUT		
PTZ		
SPOT CHANNEL		CH1
SPOT EVENT DWELL TIME		10
KEY TONE		ON
REMOTE CONTROL ID		00

Figure 3.4.1. Device mode setup screen

Table 3.4.1. Menu items in Device Setup screen

Item	Description
ALARM-OUT	Set the sensor, motion, and video loss for each alarm.
PTZ	Set the camera speed, number, type and ID for PTZ control
SPOT-OUT	Set the all details for spot monitoring.

KEY TONE	Enable/disable key tone.
REMOTE CONTROL ID	Select a ID of remote controller. 1. Select ID. 2. Press the same number as ID set in DVR on a remote controller. 3. Then  icon will be displayed on Live screen of DVR that respond to the remote controller.
SENSOR	Select sensor from 1 to 9(16).
TYPE	Set the type of sensor for the specified channel. Options are: None, N/O (normal open), and N/C (normal closed).

3-4-1. ALARM-OUT

Table 3.4.2. Menu item in ALARM-OUT Setup screen

Item	Description
ALARM OUT	Select alarm from 1 to 8.
SENSOR IN	Enable setting up to 4 sensors of 16 sensors.
MOTION ON	Enable setting up to 4 cameras of 16 cameras.
VIDEO LOSS ON	Enable setting up to 4 cameras of 16 cameras.
ALARM DURATION	Set the dwell time of alarm from 1 to 60seconds.

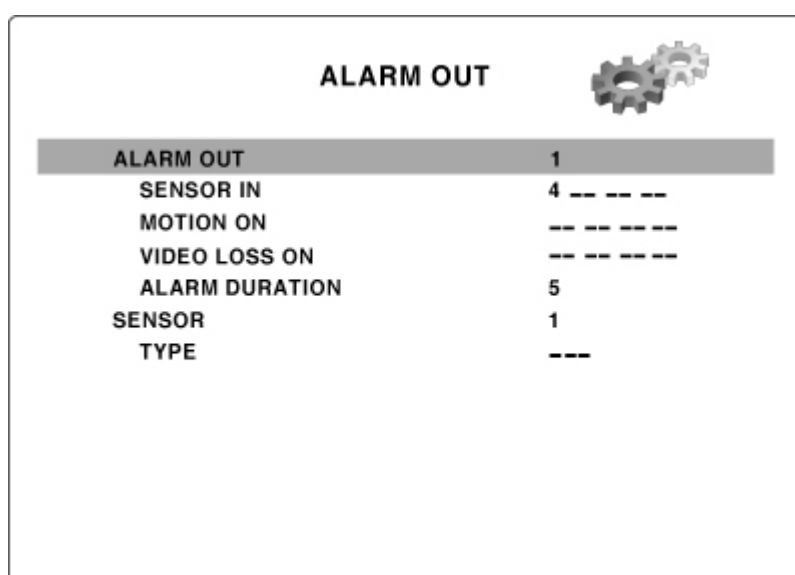


Figure 3.4.2. Alarm-out setup screen

3-4-2. PTZ Setup

To control the PTZ functions of the camera, connect the controller to the RS-485 port.

For speed dome cameras that supports RS-485, connect them directly to the RS-485 port. But if the camera is controlled with RS-232C, it is needed to use Signal Converter (RS-485 to RS-232C)

In the PTZ Control setting in the setup menu, user can select or set the protocol type of the camera which is the same as the one that is installed on the site. If the camera has a specific camera ID, select the camera ID by using Left or Right button.

The image shows a PTZ setup screen. At the top, the title 'PTZ' is centered. Below it, there are four fields: 'CH' with a value of '1', 'NAME' with a value of '---', 'SPEED' with a value of '9600', and 'ID' with a value of '0'. The 'CH' field is highlighted with a grey background.

Figure 3.4.3. PTZ setup screen

Table 3.4.3. Menu item in PTZ Setup screen

Item	Description
CHANNEL	Channel number that the PTZ is connected to
NAME	Protocol type
SPEED	19200, 14400, 9600, 4800, 2400
ID	0-63

3-4-3. SPOT-OUT

Table 3.4.4. Menu item in SPOT-OUT Setup screen

Item	Description
SPOT TYPE	Select either FULL or QUAD for spot channel display.
SPOT ON EVENT	Enable/disable spot channel display when event occurred.
SPOT EVENT DWELL TIME	Set the dwell time for the display of the event activated channel.

SEQUENCE	Enable/disable sequential display of spot channel in full screen mode.
SEQ-DWEL TIME	Set the dwell time for spot channel display in sequential display mode.
SPOT CHANNEL	Set the channel for spot monitoring.

3-5. Setup – System Mode

In this menu, system parameters can be input. Navigate through the menu items by pressing the UP or DOWN button. User can change the value of the menu items by pressing the LEFT or RIGHT button and UP or DOWN button.

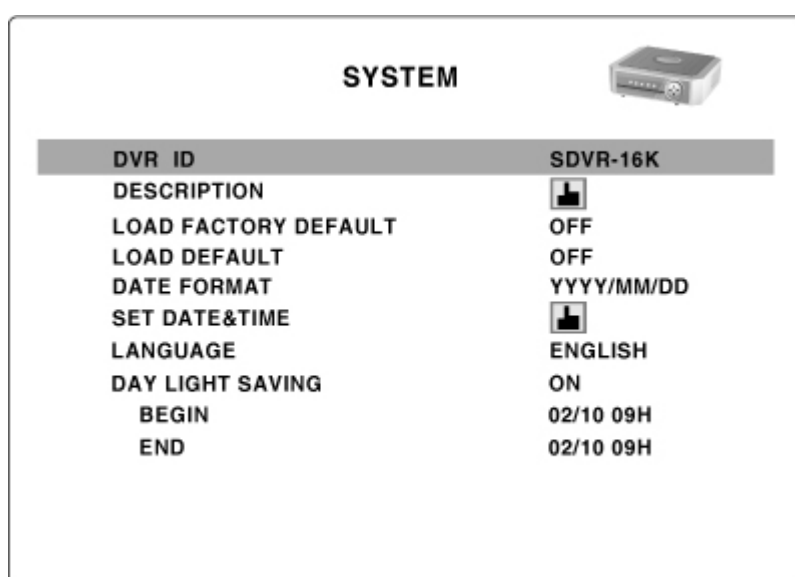


Figure 3.5.1. System setup screen

Table 3.5.1. Menu items in System Setup screen

Item	Description
DVR ID	The name of the system. Press the SEL button and move through the position for each alphanumeric character by pressing the LEFT or RIGHT button. UP or DOWN button is used to change the character for each location. 8 characters are available.
DESCRIPTION	System information.
LANGUAGE	User can select a language.
LOAD FACTORY DEFAULT	User can initialize all setting value as the factory default.
LOAD DEFAULT	Select OFF or ON. Select ON to load defaults. (Password, date format, DLS, Network setting, and HDD Overwrite

	will not be included.)
DATE FORMAT	Select the preferred date and time display
SET DATE&TIME	Set the present date, time and daylight saving for the DVR. DATE & TIME Set the present date and time for the DVR. Press SEL, then use the LEFT and RIGHT arrow controls to navigate through the position of each alphanumeric character in the date and time. Use the UP and DOWN arrow controls to change the selected character. Press ESC and select YES to confirm the new date and time.
DAY LIGHT SAVING	Set the DLS (Daylight Saving) for the area. The options are: USA EU Others OFF. 1. USA (DLS time is applied automatically when being on the DLS time zone and is displayed on the current time) 2. EU (Set the GMT area for DLS time apply on the current time) - GMT AREA +00:00 3. OTHERS - BEGIN (MAR/1ST/SUN/00H) - END (SEP/1ST/MON/00H) (Set the BEGIN and END time for the specific area except EU and USA) use the UP and DOWN arrow controls to change the value of month, week, day and hour. CAUTION: -Do not set the start time to 23:00 for DLS. -DLS can't be applied, if the date of BEGIN and END is same.

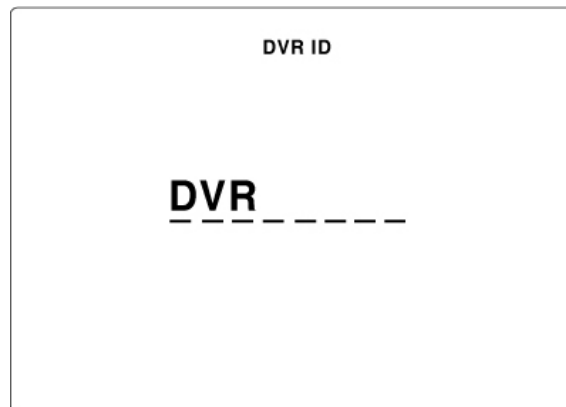


Figure 3.5.2. DVR ID setup screen

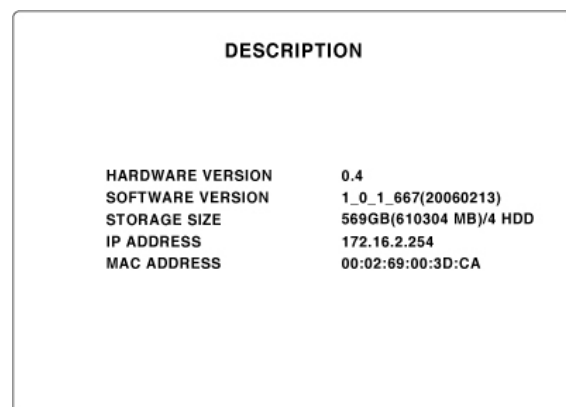


Figure 3.5.3. DVR information display screen

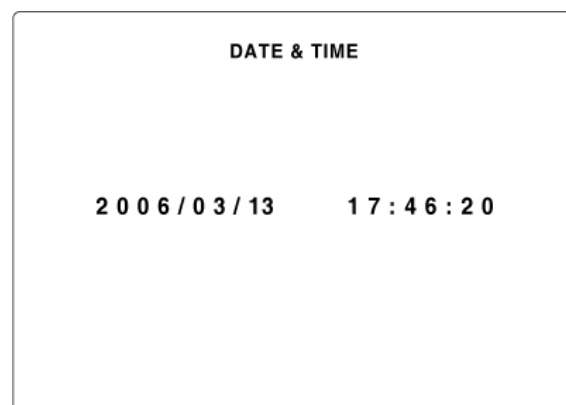


Figure 3.5.4. Date & Time setup screen

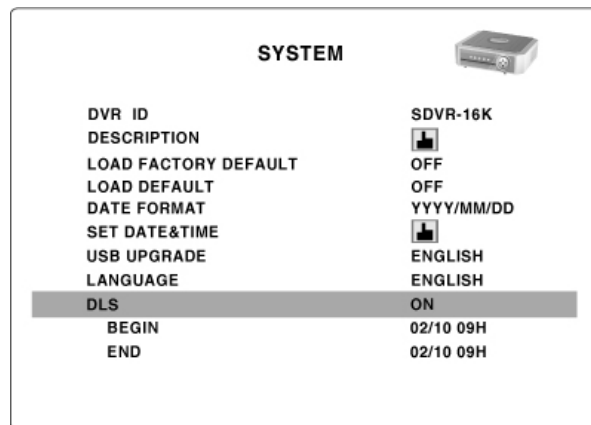


Figure 3.5.5. Daylight Saving setup screen

3-6. Setup – Security Mode

In this menu, password and security parameters can be input. Navigate through the menu items by pressing the UP or DOWN button. User can change the value of the menu items by pressing the LEFT or RIGHT button.

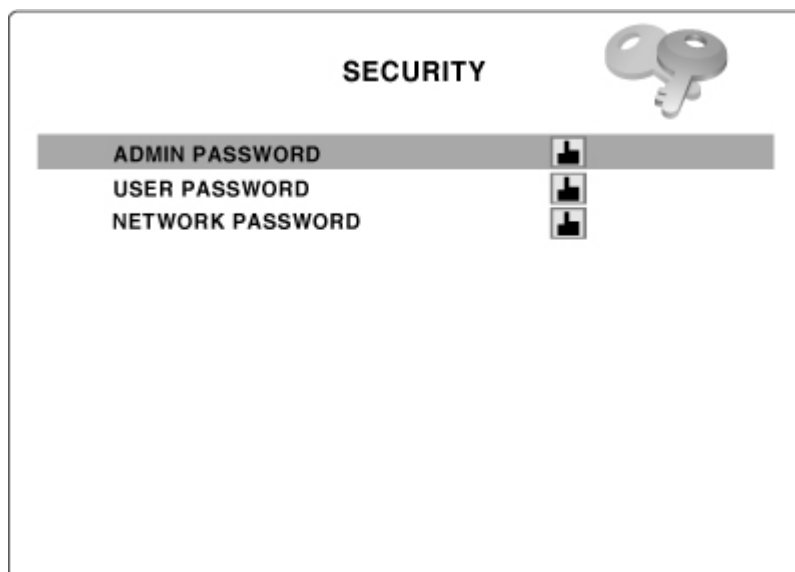


Figure 3.6.1. Security setup screen

Table 3.6.1. Menu Items in Security Setup Screen

Item	Description
ADMIN PASSWORD	Set a password for administrator. Once this menu is selected, the system will ask you current password and new password. Follow the procedure provided by the system. The password numbers can be input by using direction keys. The default password is 1111. ADMIN PASSWORD works on Setup, Power, Record, Search, Key Lock, and

	all operations.
USER PASSWORD	Set a password for user. Once this menu is selected, the system will ask you current password and new password. Follow the procedure provided by the system. The password numbers can be input by using direction keys. The default password is 1111. USER PASSWORD works for Search only.
NETWORK PASSWORD	Set a password for network client. Once this menu is selected, the system will ask you current password and new password. Follow the procedure provided by the system. The password numbers can be input by using direction keys. The default password is 1111.

3-7. Setup – Network Mode

Network parameters can be input in this screen. These parameters are used for remote clients who are connected to the DVR over the network.

Table 3.7.1. Menu items in Network Setup screen

Item	Description
PORT	Port number (Default: 5445)
CLIENT ACCESS	Enable/Disable remote access through client software.
BANDWIDTH SAVING	Enable/Disable only key frame transmission. “ON” mode is favorable for use of low network bandwidth. Mostly, set “OFF” for normal use.
NETWORK TYPE	Set the type of network connection. Options are: LAN, DHCP, ADSL Note. Other parts of the Network Setup screen change depending on what network type you select.
DHCP	Sets to use HDCP (If this is selected, DVR automatically get IP varying from time to time from network.)
ADSL (PPPoE)	ID: Registered ID is necessary for ADSL connection. Password: Registered password is necessary for ADSL connection.
LAN	IP: Register IP address that is assigned for DVR. Gateway: Register Gateway that is assigned for DVR. Subnet Mask: Register Subnet Mask that is assigned for DVR.
DDNS	Enable/disable using domain name address through DDNS server. “ON” mode, DDNS server name appears for domain registration. The DDNS sever name is <u>ns.standalone4ch.com</u> . CAUTION: Do not change this sever name. If this is changed, the

DDNS service cannot be used.

Registration

Check the MAC address of DVR from Setup>System>Description.

Please contact a distributor or an installer to register your DVR on a DDNS Server. Register the domain name on DDNS Server.

After the domain name and MAC address of the DVR are registered on a DDNS server, user can access the network with their own domain name.

SEND EMAIL

IP NOTIFICATION: Enable/disable sending daily e-mail reports on the status of your DVR.

EVENT ALARM: Enable/disable sending e-mail reports when event alarm occurs.

MAIL ADDRESS: Enter the appropriate email address to enable sending daily e-mail reports.

MAIL SERVER NAME: Enter the appropriate email server information to enable sending daily e-mail reports.

ID: Enter the ID of mail address.

PASSWORD: Enter the password of mail address.

RETURN MAIL ADDRESS: Enter the e-mail address for return email. When e-mail does not deliver or not work properly, the return email will be delivered to this e-mail address.

3-7-1. Ports

When you connect one or more DVRs to a network through an IP sharing device, each device must have a unique TCP port number for access to each unit from outside the LAN. Also, the IP sharing device must be configured for port forwarding so when each port is accessed on the IP sharing device, it will forward to the appropriate DVR.

Note: This port number is listed next to the Port menu option in the Network Setup screen. If you plan to access the DVR units only from within the same LAN, the TCP port does not have to be changed.

Network access beyond Router

In order to access beyond Router (Firewall), user must open 1 TCP port for Command level, Live channels, and Storage channels. If this port is not open properly, user can not access DVR beyond a router.

If DVR sets port number with 5445 as bellow, user has to open 1 TCP port of 5445.

NETWORK


PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	OFF
IP	172. 16. 111. 253
GATEWAY	172. 16. 1. 254
SUBNET MASK	255. 225. 0. 0
DNS	172. 16. 1. 220
DDNS	ON
DDNS NAME	ns.standalon...

Figure 3.7.1. Network setup screen

3-7-2. Network types

There are three network types. Each type requires different settings.

3-7-2-1. LAN

1. for the use of fixed IP. (See your network administrator if you do not have this information.)
2. When DVR is installed in IP sharer that is connected with ADSL, a user can assign fixed IP to DVR from IP sharer itself using “DMZ” function out of such sharer.
Input IP set in DMZ on “IP” field and Gateway of ADSL modem on “Gateway” field. Similarly, for Subnet Mask, DNS address, input relevant values in IP sharer.

NETWORK


PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	OFF
IP	172. 16. 111. 253
GATEWAY	172. 16. 1. 254
SUBNET MASK	255. 225. 0. 0
DNS	172. 16. 1. 220
DDNS	ON
DDNS NAME	ns.standalon...

Figure 3.7.2. Network setup screen - LAN


Table 3.7.2. LAN

Item	Description
IP	The fixed IP address of the DVR
GATEWAY	The IP address of the gateway
SUBNET MASK	The subnet mask for the LAN
DNS	Set the DNS IP.

3-7-2-1. DHCP

An IP address is automatically assigned by the DHCP server, which automatically assigns IP address and other parameters to new devices.

When ADSL or other network being used adopts variable IP method, not fixed IP. This option is used as a way to automatically get IP address.

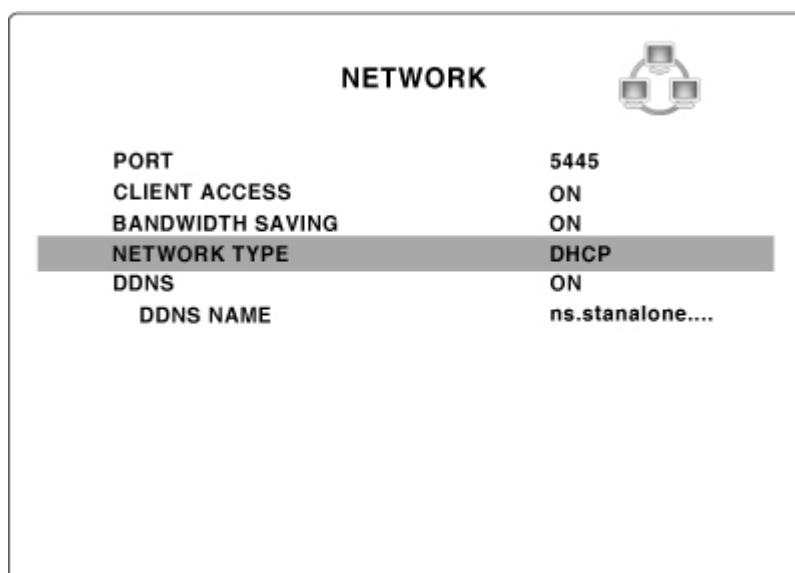

The screenshot shows a network configuration interface titled "NETWORK" with a network icon. The settings are as follows:

PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	DHCP
DDNS	ON
DDNS NAME	ns.stanalone....

Figure 3.7.3. Network setup screen - DHCP

3-7-2-1. ADSL (PPPOE)

To use this ADSL (PPPoE) function when the network type connecting the DVR is using PPPoE method.

If ADSL type is not using inputting IP and Password like VDSL or DVR is installed in IP sharer, a user can not select this function. In this case, a user should select DHCP or LAN.

NETWORK


PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	ADSL
ID	
PASSWORD	
DDNS	ON
DDNS NAME	ns.stanalone....

Figure 3.7.4. Network setup screen - ADSL

Table 3.7.3. ADSL

Item	Description
ID	The user ID for ADSL connection
PASSWORD	The password for ADSL connection

3-8. Setup - Storage Mode

User can set recording mode in the hard disk drive or initiate format of the hard disk driver.

STORAGE


OVERWRITE	ON
FORMAT	OFF
DISK INFO	
SAVE SETUP TO A USB	ON
LOAD SETUP FROM A USB	OFF
RECORDING LIMIT	OFF
RECORDING LIMIT DAYS	30DAYS

Figure 3.8.1. Storage setup screen

Table 3.8.1. storage setup

Item	Description
OVERWRITE	Overwrite existing material when hard disk drive is full.
FORMAT	Format hard disk drive.
DISK INFO	Information such as capacity, usage, recording times, and others of all HDD installed in DVR.
SAVE SETUP TO A USB	User can save the current configuration of DVR to the USB memory stick. Put the USB stick into the USB port on the front panel and press SEL to start the saving process
LOAD SETUP FROM A USB	User can upload the configuration of DVR to another DVR using the USB Memory stick. Put the USB stick into the USB port on the front panel and press SEL to start the loading process. After upgrade is completed, DVR will reboot automatically and setup value will be applied.
RECORDING LIMIT	Enable/disable recording limit days for the video data onto the hard disk drive.
RECORDING LIMIT DAYS	Set the recording limit days for the video data onto the hard disk drive from 1 to 60 days.

3-9. Saving Setup

To preserve the changed setup values, select the SAVE SETUP menu and select CONFIRM.

4. Live & Search

4-1. Live Window

In the Live window, video inputs from the cameras are displayed on the configuration of the live setup. Various indicators showing the status of the DVR are shown as OSD symbols. Refer to Table 4.1.1 for the meanings of the indicators.

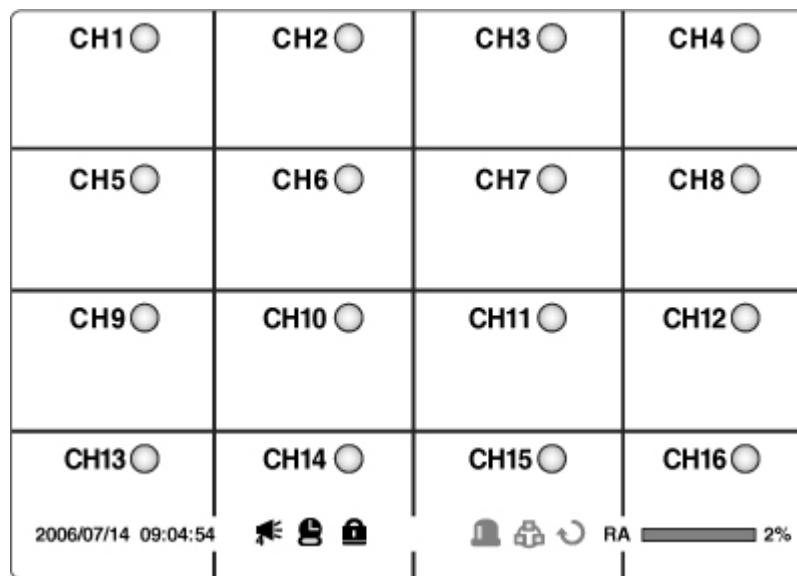


Figure 4.1.1. Live window

Table 4.1.1. Indicator ICONS in Live window

Icon	Description
	Continuous recording in progress
	Manual recording in progress
	Motion recording in progress
	Enable/disable the audio in live display
	Enable/disable the alarm output
	Enable/disable the lock function of the remote controller
	Indicates that alarm output is activated.
	Event indicator. When there is an alarm (sensor alarm or motion alarm) in the video channel, this icon will be highlighted in bright red.
	Indicates that a network client is connected to the DVR.
	Indicates that sequencing mode is enabled.

Table 4.1.2. Button functions in Live window

Button	Description
--------	-------------

SETUP	Launch the SETUP menu.
SEQ	Enable/disable the automatic sequential display in full or quad mode. The channel display in quad mode is followed the settings in the setup menu.
PLAY/PAUSE	Launch the SEARCH window.
	Use to select channel 1 to 4 in full screen mode or to change the quad display in quad display mode by using the LEFT or RIGHT button. And use to select and highlight a channel to display in full display mode in 9 split display mode. The channel display in quad display mode is followed the setting in the setup menu.
SEL	Switch between full screen and current display mode.
ESC	No action
REC	Select for manual recording for all channels.

4-2. SEARCH Window

1. Select the date of the video to begin searching by using the direction buttons to navigate through the month.

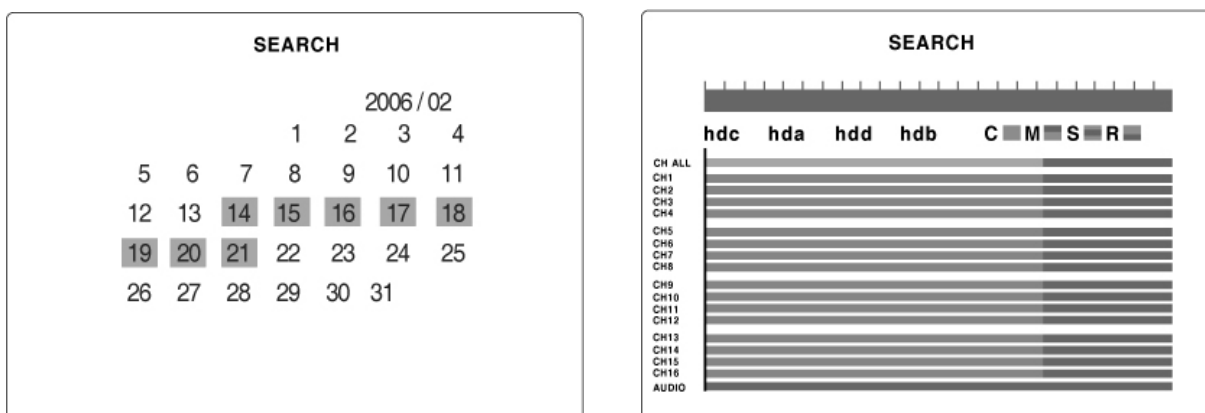


Figure 4.2.1. Search screen - Date

2. Once you have selected the date, press the SEL button to move to the time line search window.
3. Use the buttons REW  & FF  to select a hour time zone on the 24hours time table. Once you have selected the time zone, press the SEL button to move to the 60 minutes time table and select all or each channel for playing back the recorded video.
4. Once you select the time zone, then move the time line select Bar (Red) to the point you wish to start playing video by using the LEFT or RIGHT buttons or F/REW  & F/ADV .
5. Press the SEL button to playback the recorded video.

4-3. Play mode

During the playback of a recorded event, the mode changes from SEARCH to PLAY. While in PLAY mode, you may return to SEARCH LIST by pressing the ESC button.

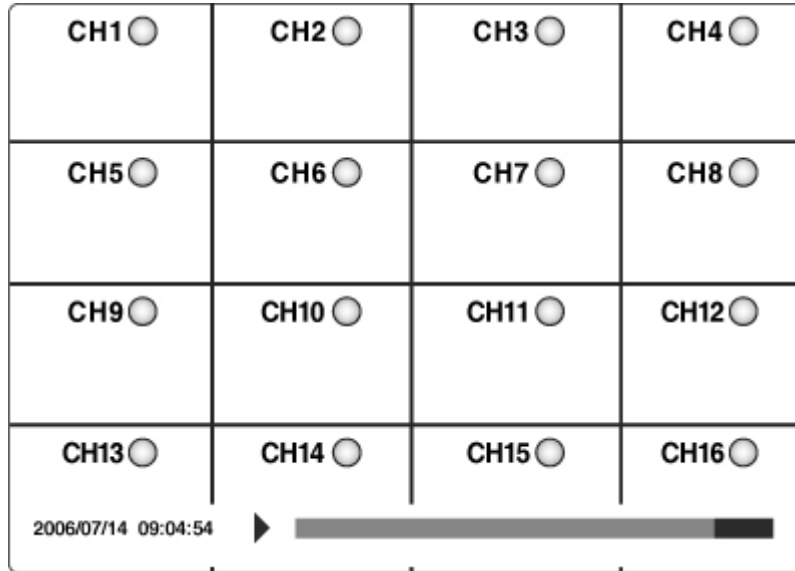


Figure 4.3.1. Play mode screen

Table 4.3.1. Button functions in Play mode

Button	Description
ESC	Return to the previous menu screen or exit from the setup menu
REW	Press to rewind the footage at 1x, 2x, 4x, and 8x speeds. Reverse playback speed is shown as -1x(normal), -2x (2 times normal), -4x (4 times normal), and -8x (8 times normal) at the bottom right of the screen.
F/REW	Jump/Step backward. The playback position moves 60 seconds backward.
PLAY/PAUSE	Press to play or pause recorded video.
F/ADV	Jump/Step forward. Playback position moves 60 seconds forward.
FF	Press to fast forward the footage at 1x, 2x, 4x, and 8x speeds. Playback speed is indicated as +1x, +2x, +4x, and +8x for normal, twice, 4 times, and 8 times of the regular speed at the bottom right of the screen.
	Use to select channel 1to 4 in full screen mode or to change the quad display by using the LEFT or RIGHT button. The channel display in quad display mode is followed the setting in the setup menu.
SEL	Switch between full screen and current display mode.
FREEZE/CAPTURE	Press to launch archiving function.

User can see the log list by selecting this item.



To operate the PTZ functions, connect the controller to the RS-485 port on the rear panel. In the PTZ control setting in the setup menu, user can select or set the protocol type of the camera which is the same as the one that is installed on the site. If the camera has a specific camera ID, select the camera ID using Left or Right button.

The PTZ function button is found on the front panel. Once you press the PTZ button, the screen will appear as in figure 4.3.1. Highlight the item to select and control the cameras by using the UP and DOWN or LEFT and RIGHT buttons. Please refer to the table 4.4.1. for description.



Table 4.5.1. Button functions in PTZ control

Item	Description
PAN / TILT	Use the UP or DOWN button for TILT and LEFT or RIGHT button for PAN of the selected camera.
ZOOM / FOCUS	Use the UP or DOWN button for ZOOM in or out and LEFT or RIGHT button for FOCUS near or far of the selected camera.
INITIALIZE	Initialize the PTZ settings of the selected camera.

Table 4.5.2. Description of RS-422/485 port

NO.	Description	
Classification	Rs-422	RS-485
1	TX+ (+ Transmit data)	
2	TX- (- Transmit data)	
3	RX+ (+ Receive data)	Data +
4	RX- (- Receive data)	Data -

5. Archiving Video into USB Memory Device

To archive a still image or video to a USB storage device, user must first capture a still image or video to a hard disk drive.

5-1. Capturing images or video

5-1-1. Still Image backup onto USB flash memory or CD media

Still images can be captured and archived onto the USB stick, CD media or hard drive in live mode or while playing back recorded video.

In live mode, press the BACKUP button to launch the archive function.

1. When you press BACKUP button, the archiving screen will display as Figure 5.1.1.
2. And the DVR will ask which media you will take for archiving.
3. Once you select the media, the system will start to archive the data to the selected media.

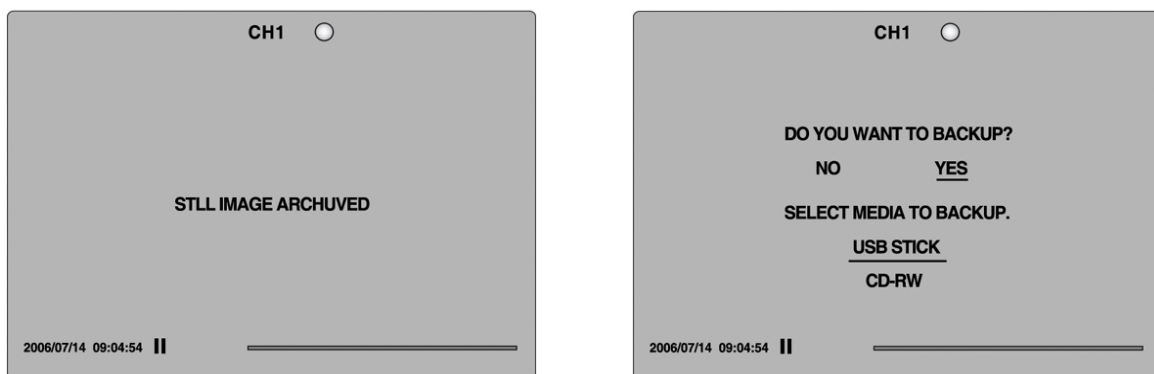


Figure 5.1.1. Still Image Archiving and Backup Screen

5-1-2. Video backup onto USB flash memory or CD media

Video can be captured and archived onto the USB stick, CD media or hard drive while playing back recorded video.

In playback mode, press the BACKUP button to launch the archiving function.

1. When you press BACKUP button, the DVR will ask whether to archive a Still Image or Video clip.
2. If the user selects VIDEO, the DVR will ask which media you will take for archiving as Figure.
3. If the user selects VIDEO, the DVR will ask for the setting of the archiving duration.
4. Once you select the media, the system will start to archive the data to the selected media.

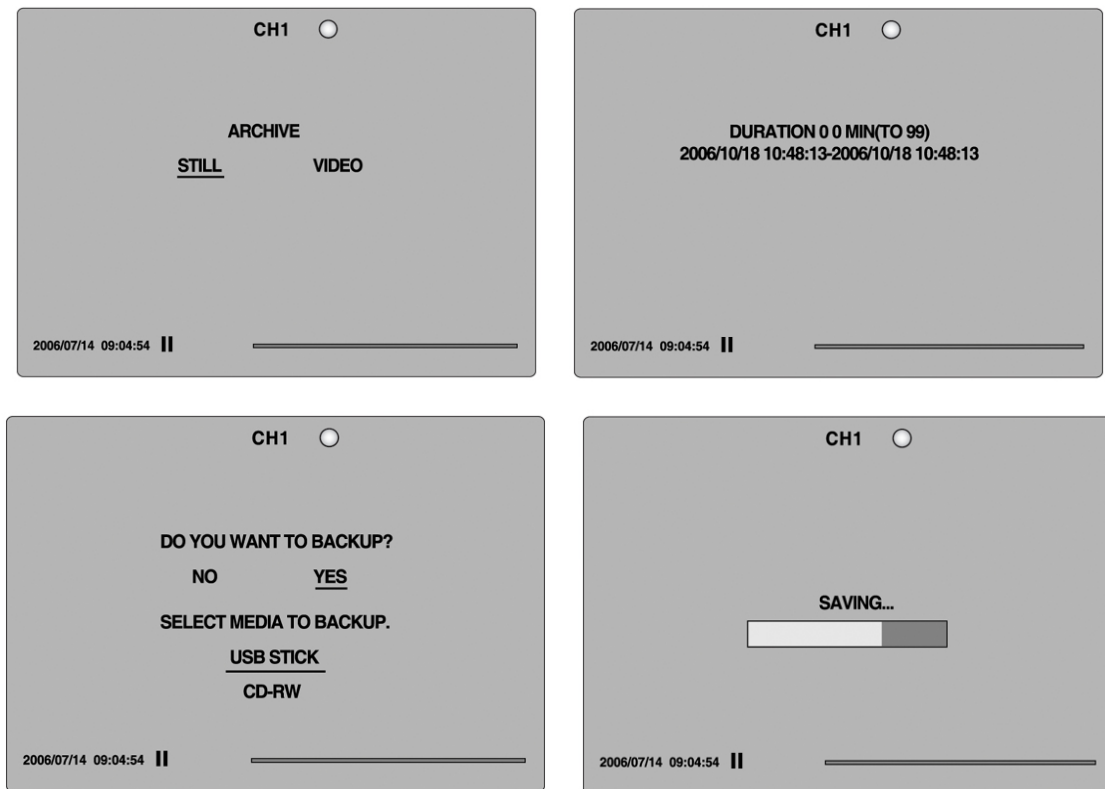


Figure 5.1.2. Video Archiving and Backup Screen

The DVR will convert the corresponding portion of the video into an AVI file.

5-2. Transferring still images or video from the ARCHIVE list

The stored data onto hard drive will be found in the ARCHIVE list in SEARCH menu.

User can back up still images or video into the storage device from the ARCHIVE list.

1. Select the date to begin searching by using the LEFT, RIGHT, UP and DOWN buttons to navigate through the days.
2. Once you have selected the date, press SEL to open the list of stored data.
3. Use the UP and DOWN buttons to scroll through the on-screen listings.
4. Use the LEFT and RIGHT buttons to display a list of stored events that happened previous to or after the current selection.
5. Once the desired event has been selected, press SEL to view the still image or the first frame of the selected video.
6. Press the BACKUP button to launch the archiving function in playback mode.

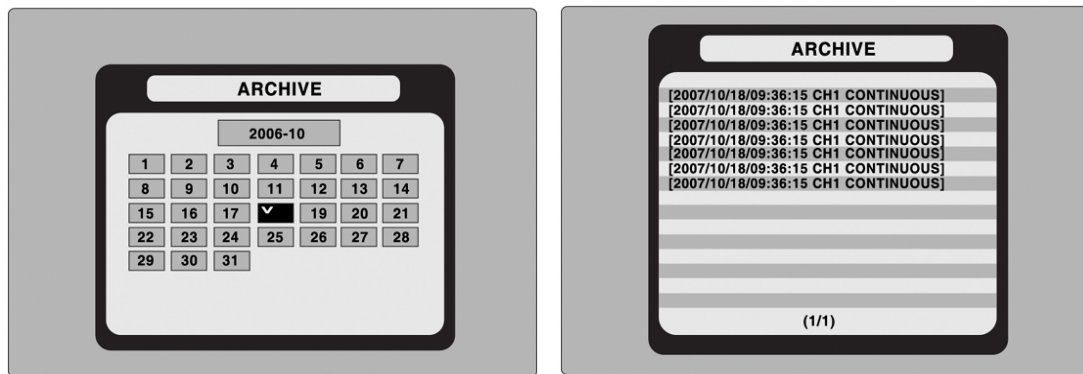


Figure 7.2.1. Archive Search Screen

5-3. Playback of Backup Video

5-3-1. Playback of backup video in AVI format

If the proper codec is not installed on your PC, the AVI file may not be played correctly. If this happens, install the 'FFDSHOW' codec that can download from open sites.

5-3-2. Playback of backup video in exclusive (NaFs) format

If the data is backed up in an exclusive file format, this video can be played back only an exclusive player in CD that is provided with DVR.

6. Upgrading Firmware

In order to upgrade, the firmware upgrade file must first be downloaded and copied into the USB memory stick. Create a new folder in the USB memory stick and name it “upgrade”. Copy the firmware upgrade file “app16xxxxxx.bin” for 16CH DVR or “app9xxxxxx.bin” for 9CH DVR into the “upgrade” folder.

NOTICE

The folder on the USB memory stick must be named **“upgrade”**.

After the firmware upgrade is copied into the USB memory stick, connect the USB memory stick to the USB port on the front panel and do the following:

1. Press the SETUP button and enter the admin password.
2. Go to PASSWORD and select the ADMIN PASSWORD.
3. Enter the password as 12341234, and press the SEL button.
4. The engineering mode screen “DVR DIAGNOSTICS” will appear.
5. Select USB upgrade, and then the upgrading will start automatically.
6. After the upgrade is completed, select Boot Application to reboot DVR.

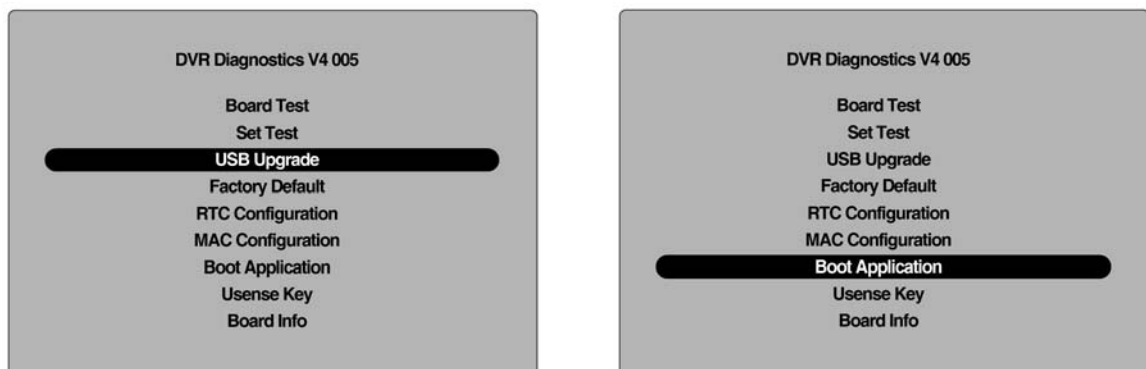


Figure 6.1.1. Engineering mode screen

7. Network – By an exclusive viewer

The DVR provides a live remote monitoring feature. Remote monitoring requires installation of a software client program on your PC.

NOTICE

In a high bandwidth network, a maximum of four users can access one DVR simultaneously. In a low bandwidth network it is recommended that only one user access the DVR at a time.

For remote viewing, the frame rate is limited to 1 frame/sec when there is no recording operation in the DVR. When the DVR is recording, the video frame rate for remote live monitoring will follow the recording frame rate on the DVR.

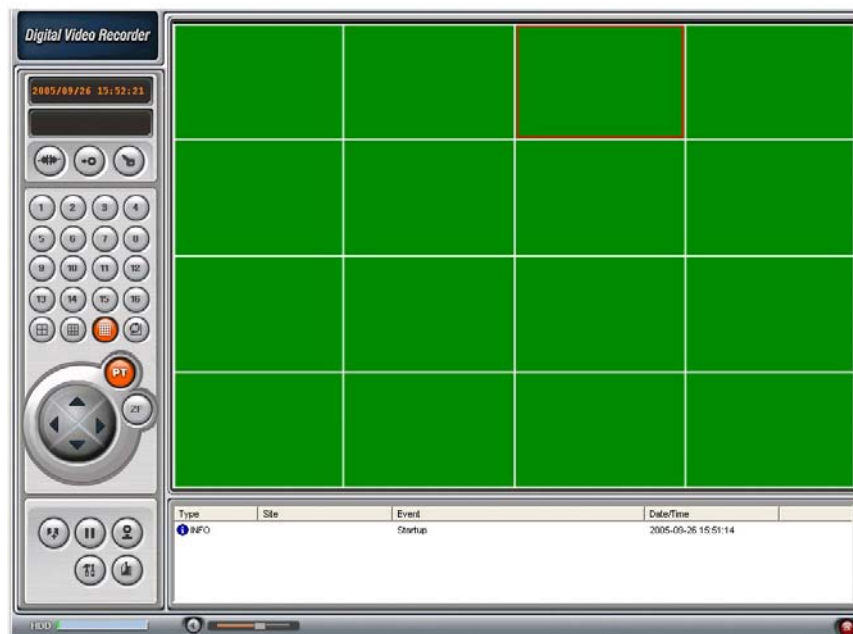


Figure 7.1. Main user interface

7-1. Overview

The remote software supports remote live viewing, search, playback and system configurations. By installing the Network Client Viewer on a Windows PC, you can monitor real-time and recorded images via optional Ethernet network.

7-2. Minimum PC requirements

PC Specification	Minimum Requirement	Recommended
CPU	Intel Pentium III 500Mhz	Intel Pentium IV 2Ghz
Memory	128MB	256MB
VGA	16MB	64MB
Resolution	1024x768	1024x768
Disk space	10MB	10MB
OS	Windows 2000	Windows 2000, Professional, XP Vista
Network	10/100Base T	10/100Base T
Others	Direct X 8.1	Direct X 9.0 or Higher

Before installing the program, check the PC specifications. The Network Client Viewer may not perform correctly if the PC does not meet the minimum requirements.

7-3. Installing the program

1. Insert the provided CD into the CD-ROM drive of your PC.



2. Run `network.exe` to start the installation process.
3. Follow the on-screen directions.



4. Double click the `Network Client` icon to start the program.

7-4. Live viewer



When installation is complete, double click the  icon on your desktop to start the program.

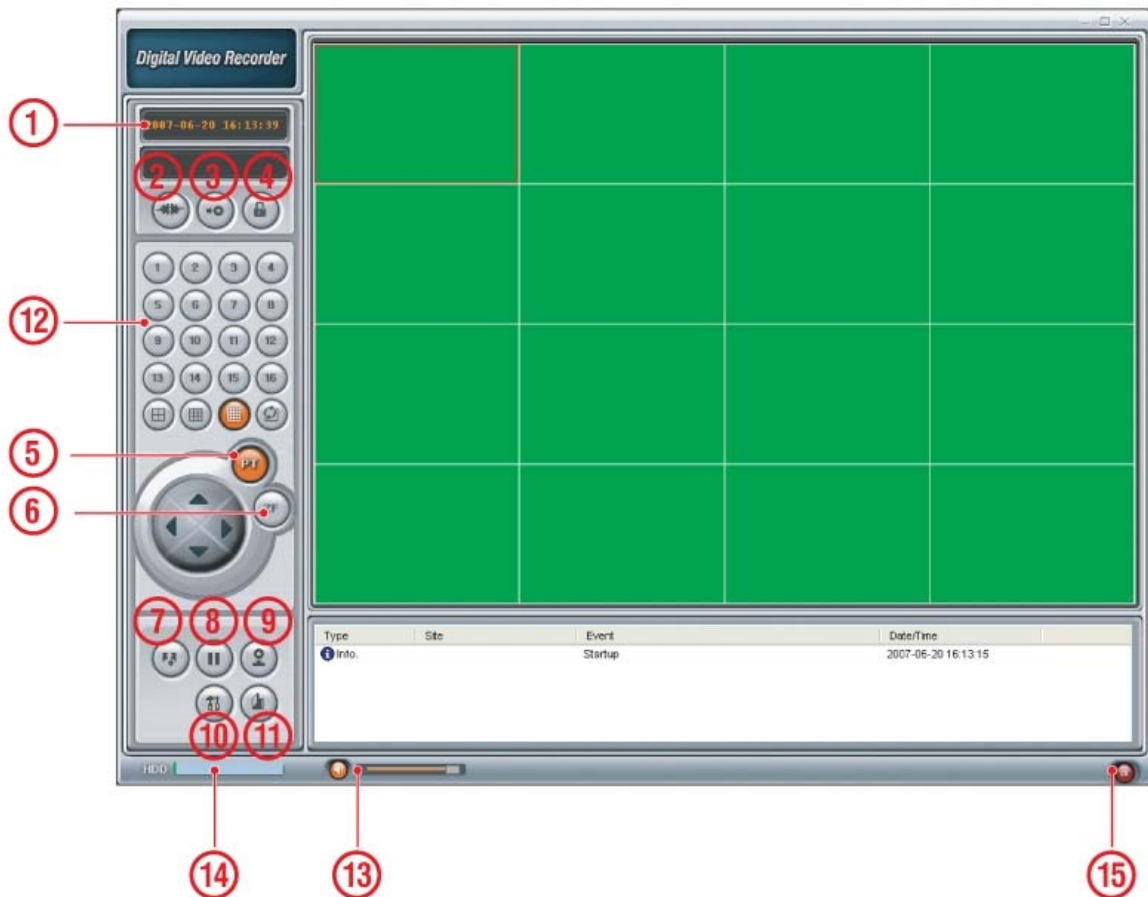
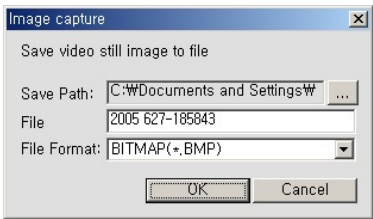


Figure 7.4.1. Main user interface

Table 7.4.1. Main controls in Live

NO	Button	Description
1	DATE & TIME	Displays the current date and time.
2	CONNECT	Click this icon to connect to the DVR
3	SEARCH	Click this icon to search for recorded video.

4	LOCK/ UNLOCK	Click this icon to lock/unlock all operations of the client software. Once the lock or unlock icon is clicked, this pop up window appears. Remember the password and enter it when you operate the client software.
5	PAN/TILT	Use these buttons to control the PAN/TILT features on the remote camera.
6	ZOOM/ FOCUS	Use these buttons to control the ZOOM/ FOCUS features on the remote camera.
7	CAPTURE	Click this icon to capture a still image. Once the capture icon is clicked, this pop-up window appears. The still image is captured in either jpeg or bmp file format.
		
8	PLAY/PAUSE	Click this icon to play/pause live video.
9	RECORD	Enable or disable recording of live video to local disk.
10	SETUP	Click this icon to setup configuration of client software.
11	EXIT	Click this icon to exit the client software.
12	DISPLAY MODE	Click these icons to select display mode.
13	AUDIO	Use the volume control bar to set the audio level. The audio can be turned on or off by clicking the audio icon.
14	HDD USAGE	DVR HDD storage Indicator.
15	ALARM	The alarm output indicator lights up for 5 seconds if alarm output is activated on the DVR.

7-5. Search and Playback Viewer

The search window can be accessed by clicking the search icon on the upper right of the main user interface.

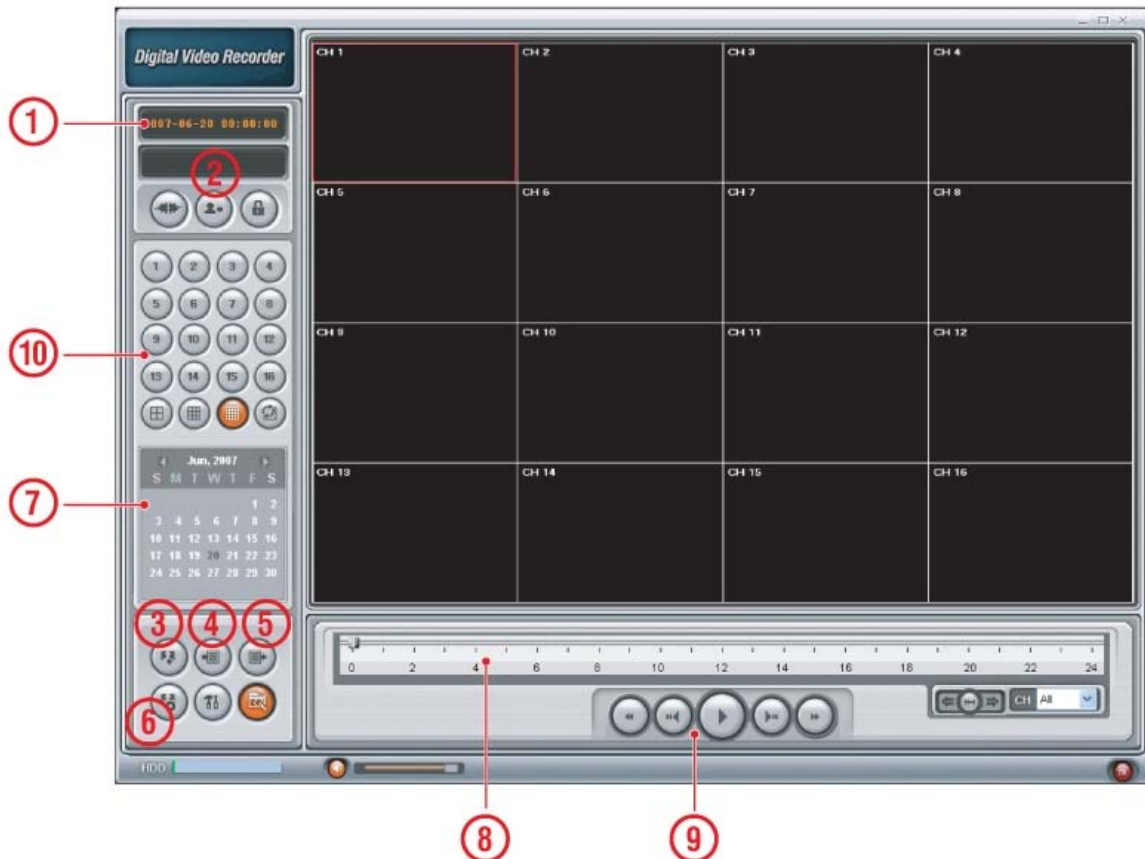


Figure 7.5.1. Main user interface

Table 7.5.1. Main controls in Search

No	Button	Description
1	DATE & TIME	Displays the recording time of the data selected on the time bar at the bottom of the main user interface.
2	LIVE	Click this icon to see live video.
3	CAPTURE	Click this icon to capture a still image of recorded video. Once the capture icon is clicked, this pop up window appears. The still image is captured in either jpeg or bmp file format.
4	MARK IN	Click this icon to set the start time for video backup.
5	MARK OUT	Click this icon to set the ending time for video backup.

6	BACKUP	Click this icon to backup the selected recorded video in AVI format.
7	SEARCH CALENDAR	The calendar shows dates with recorded video in a light blue and the selected date in dark blue.
8	TIMELINE BAR	The timeline shows recorded data in dark blue on the bar. You can adjust the time-line scale and move it to the time you wish to play back. Click the play icon to display the recorded video.
9	PLAY BUTTONS	
10	DISPLAY MODE	Click these icons to select display mode.


7-5-1. Backup

You can back up recorded video in AVI format from the search viewer.

1. Click the MARK IN icon  when the scale on the blue timeline is on the time you wish to the backup file to begin.

2. Set the ending time on the blue timeline by dragging the scale to the ending time for the backup file and clicking the MARK OUT icon . The color of the timeline between the beginning time and ending time will change to dark green.

3. Next, click the backup icon  and the pop up window appears as below.

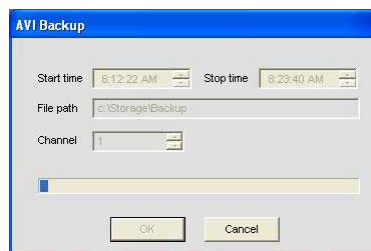

The beginning and ending time can also be set on this window.

After selecting a channel for backup, click the OK button. The backup will begin.

7-6. PC System configuration

Click the setup icon  to setup the configuration of PC that the network client S/W is installed.

7-6-1. General

Once you click the setup icon, this pop up window appears. Select security options and set a password. When you access any of the selected functions, you will need to enter the password. You can also set the save path for capturing and backup.


Security Option: Set a password for security options.

Save Path: Specify the location to record the receiving video for Backup and still image for Capture.

Automatic reconnection: If a user selects this function, the client S/W will automatically try to connect to the previously connected IP address if the network connection is lost.


Display network statistics: If a user selects this function, the client S/W will display network status, Bit rate and Frame rate.

Time Format: Change the way the Client software displays the time.

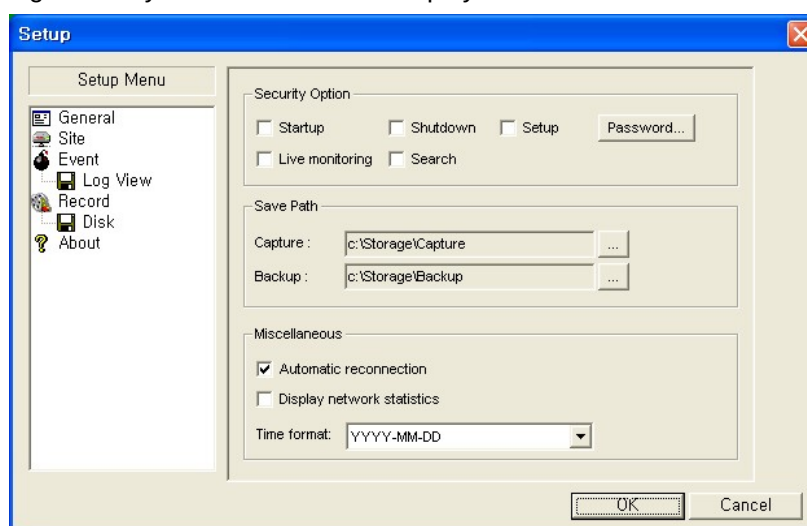


7-6-2. Site

This option shows the channel information of the DVR and allows you to change the channel title.

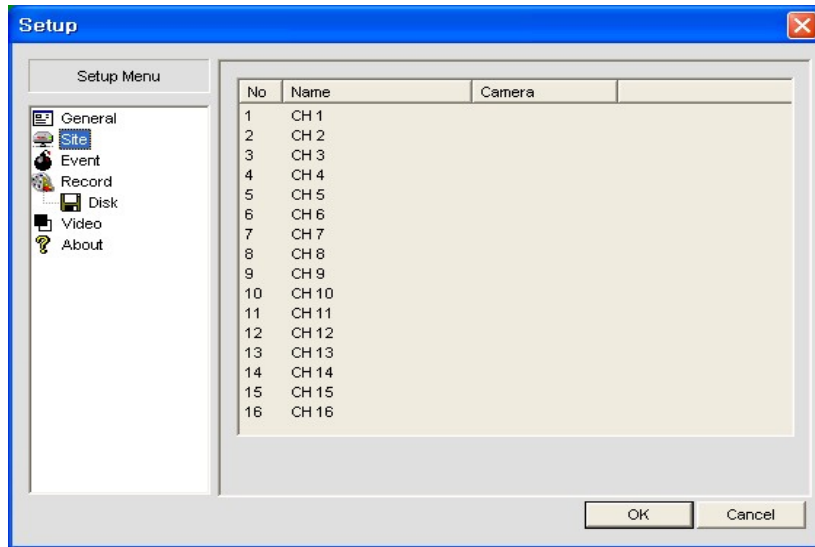


7-6-3. Event

You can set event items, the amount of local disk space you want to allow and the save path for the log file.

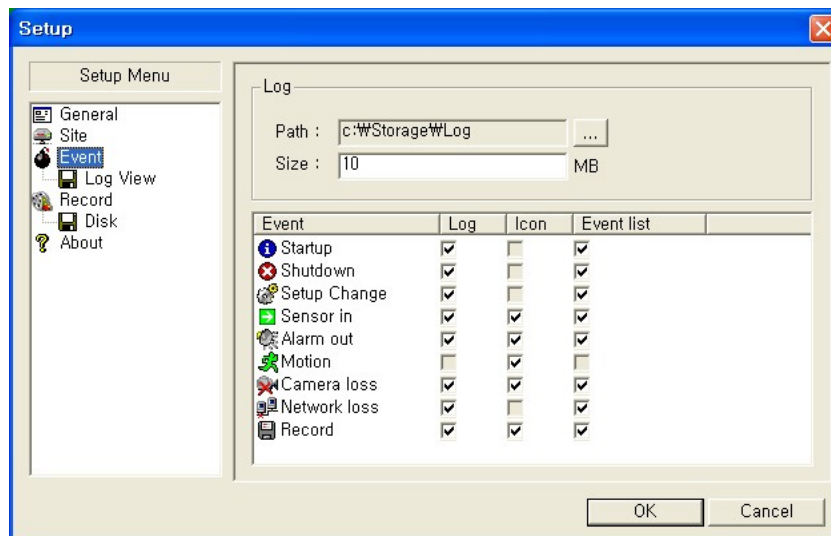


- LOG – Select to save event log into 'log file'.
- ICON – Select to display the event on live video.
- EVENT LIST – Select to show the event in the 'Event List' window of live mode.

You can search and check the recorded log data.

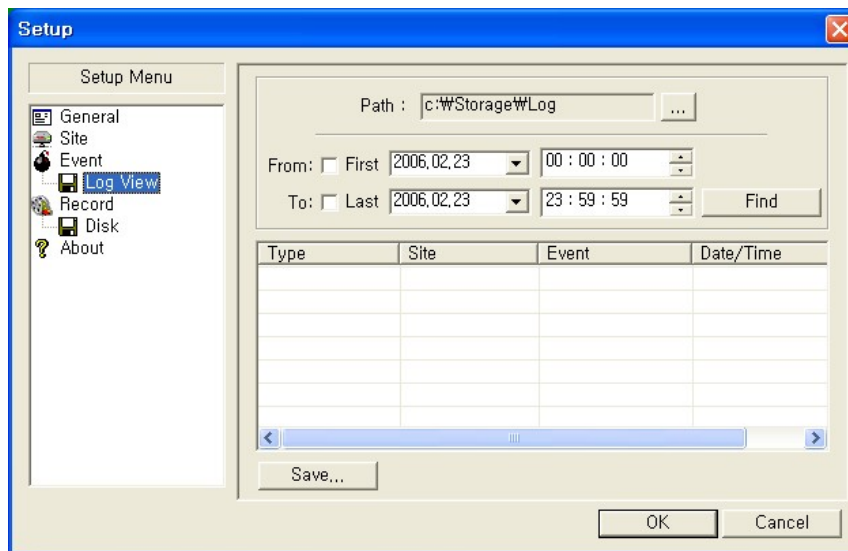


7-6-4. Record

You can set the recording conditions for Always, Event, or Auto recording. You can also select individual channels or all channels to record.

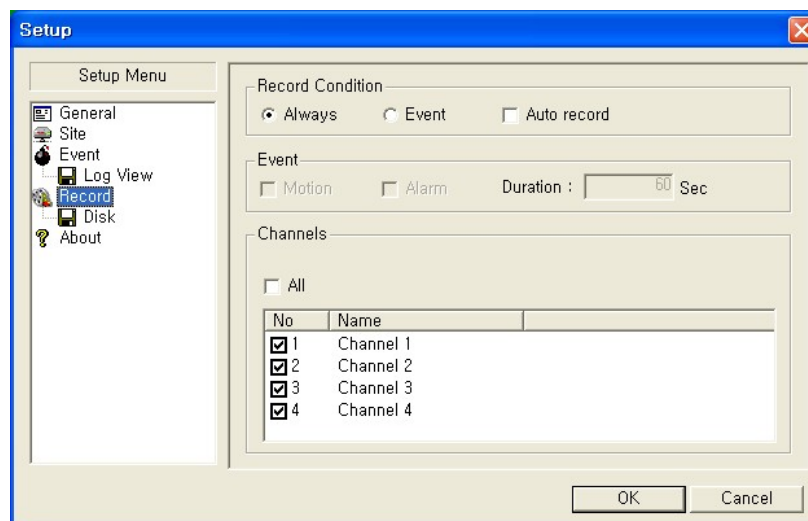


When you set the recording condition to Event, you can set event for motion or alarm with duration. You can also set each or all channels to record.

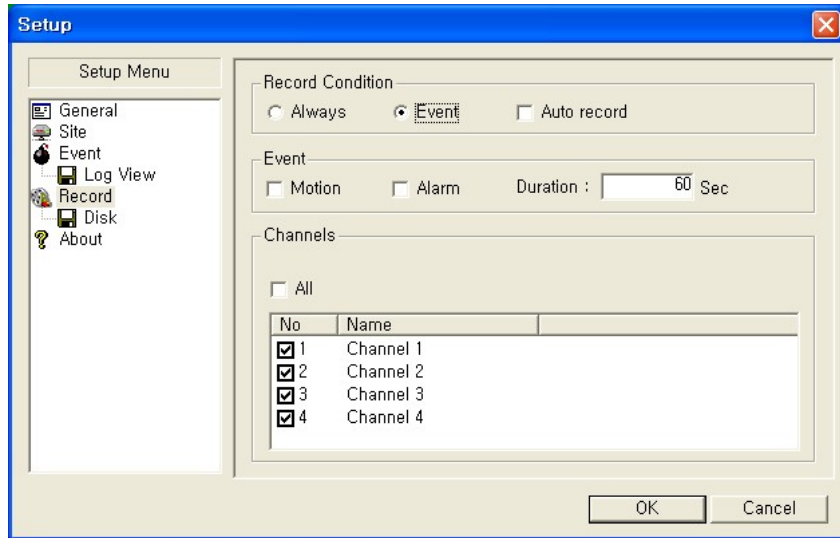

7-6-5. Disk

You can select which local disk to use and the amount of disk space you want to allow the program to use for recording. You can also choose to overwrite data or stop recording when the maximum amount of disk space is full.

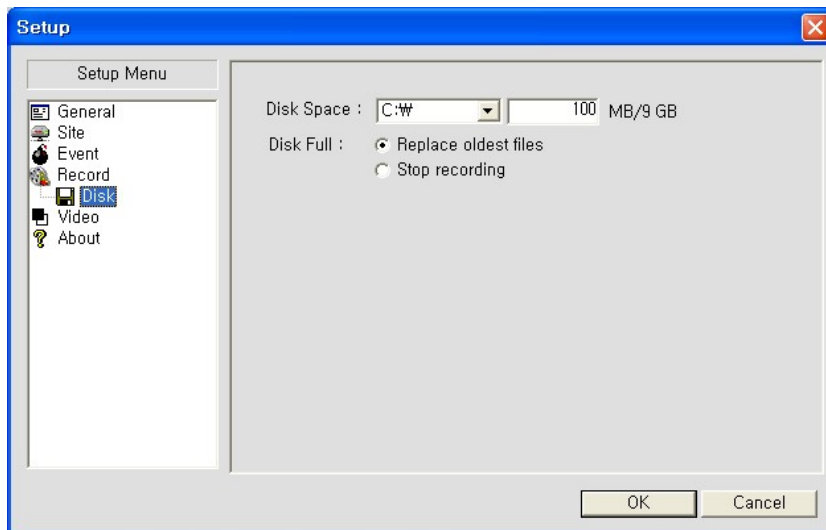

8. Network – By an web-browser viewer

The DVR provides a live remote monitoring feature by web-browser viewer.

8-1. Download Web Brower Viewer and Connection


1. User needs to access <http://ns.standalone4ch.com/webview2/> to get a web browser viewer. Then the window will appear as bellow. Click “YES” to download Web Browser Viewer from the server run by the manufacturer.



2. Web Browser Viewer will be downloaded and installed.



3. Click  button and enter IP address (or Domain name using DDNS), the password, and Port number.

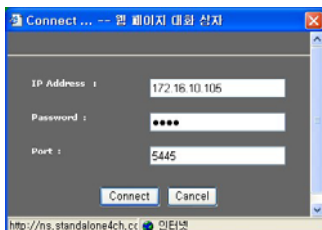

4. Then user can access DVR.



8-2. Main Features

8-2-1. Live

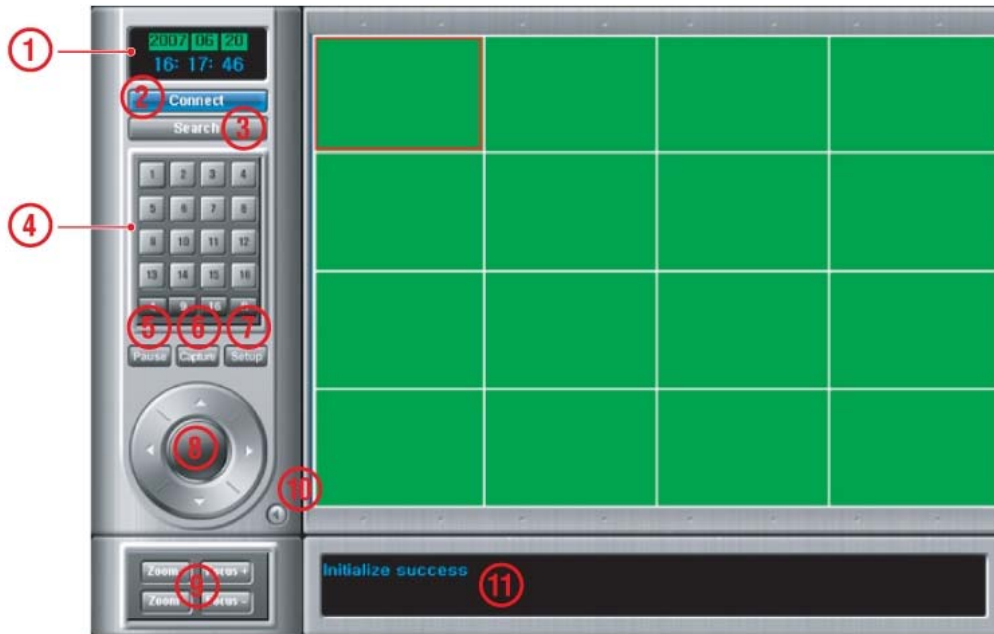


Figure 8.2.1. Main user interface - Live

Table 8.2.1. Main controls in Live

No	Name	Description
1	DATE & TIME	Displays the current date and time.
2	CONNECT	Click this icon to connect to the DVR
3	SEARCH	Click this icon to search for recorded video.
4	LIVE DISPLAY MODE	Click these icons to select display mode.
5	PAUSE	Click this icon to pause the display screen.
6	CAPTURE	Click this icon to capture the image from live display.
7	SETUP	Click this icon to control remotely the setting of DVR.
8	PAN/TILT	Use these buttons to control the PAN/TILT features on the remote camera.
9	ZOOM/FOCUS	Use these buttons to control the ZOOM/ FOCUS features on the remote camera.
10	AUDIO	The audio can be turned on or off by clicking the audio icon.
11	CONNECTION STATUS	Shows the client connection information.

-2-2. Search and Playback

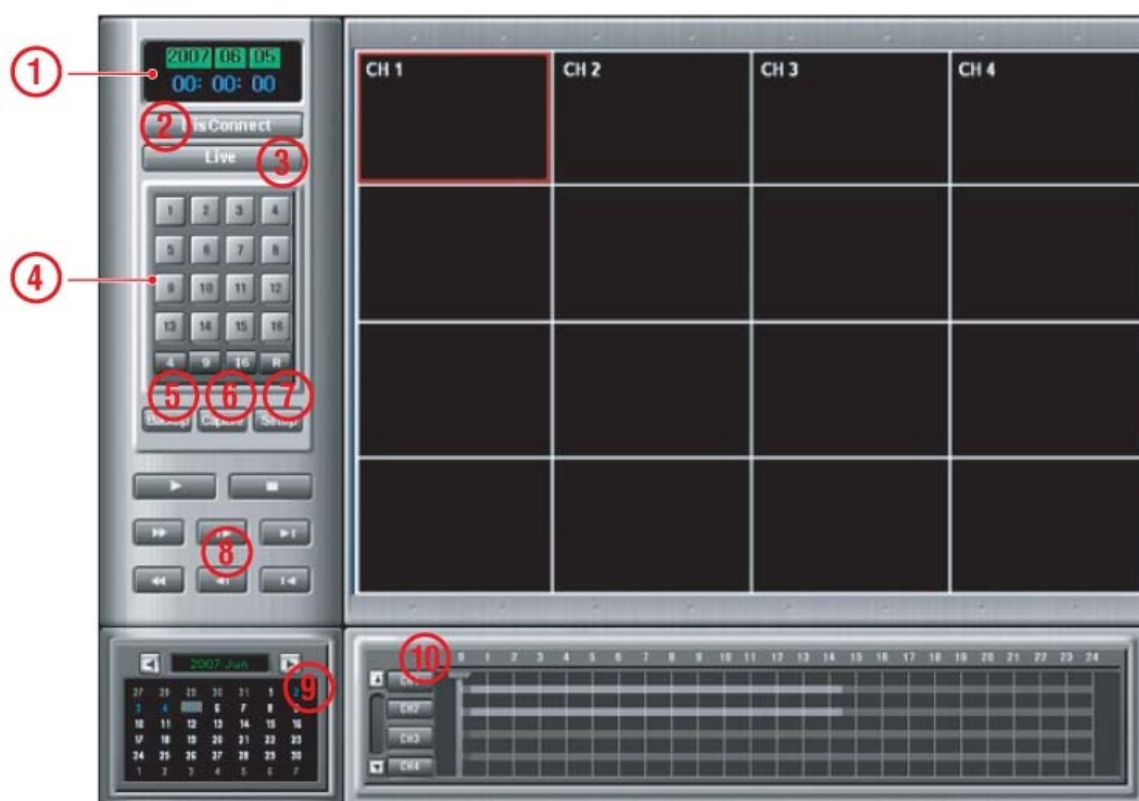


Figure 8.2.2. Main user interface – Search & Playback

Table 8.2.2. Main controls – Search & Playback

No	Name	Description
1	DATE & TIME	Displays the current date and time.
2	Connect/Disconnect	Click this icon to connect to the DVR
3	LIVE	Click this icon to search for recorded video.
4	DISPLAY MODE	Click these icons to select display mode.
5	BACKUP	Click this icon to pause the display screen.
6	CAPTURE	Click this icon to capture the image from playback.
7	SETUP	Click this icon to control remotely the setting of DVR.
8	PLAYBACK BUTTONS	Use these buttons to control the PAN/TILT features on the remote camera.
9	SEARCH CALENDAR	Use these buttons to control the ZOOM/ FOCUS features on the remote camera.
10	TIMELINE SEARCH WINDOW	The audio can be turned on or off by clicking the audio icon.

APPENDIX

1. How to register DDNS (Dynamic Domain Name Server)

If DVR is installed in network using dynamic IP addressing and user want to access DVR with domain name instead of IP address, user should register DVR and domain name with DDNS.

1-1. Setting of NETWORK Setup menu

A. Please go to SETUP>NETWORK. There are three network types such as DHCP, ADSL, and LAN.

NETWORK	
PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	OFF
IP	172. 16. 111. 253
GATEWAY	172. 16. 1. 254
SUBNET MASK	255. 225. 0. 0
DNS	172. 16. 1. 220
DDNS	ON
DDNS NAME	ns.standalon...

B. Please select proper network type and set DDNS as ON.

DHCP: Select when DVR is installed in Local Network with router or IP sharer and IP address is automatically assigned by the DHCP server.

LAN: Select when DVR is installed in Local Area Network with router or IP sharer and IP address is static and private IP address.


ADSL (PPPoE): To use this ADSL (PPPoE) function when the network type connecting the DVR is using PPPoE method.

If ADSL type is not using inputting IP and Password like VDSL or DVR is installed in IP sharer, a user can not select this function. In this case, a user should select DHCP or LAN.

C. Please make sure DNS SERVER NAME is "ns.standalone4ch.com".

1-2. Checking Mac address on the rear panel of DVR and Registration No.

Please check the Mac address (Serial No.) and Registration No. on the rear panel of the system. Registration No. can be provided by manufacturer or distributor.

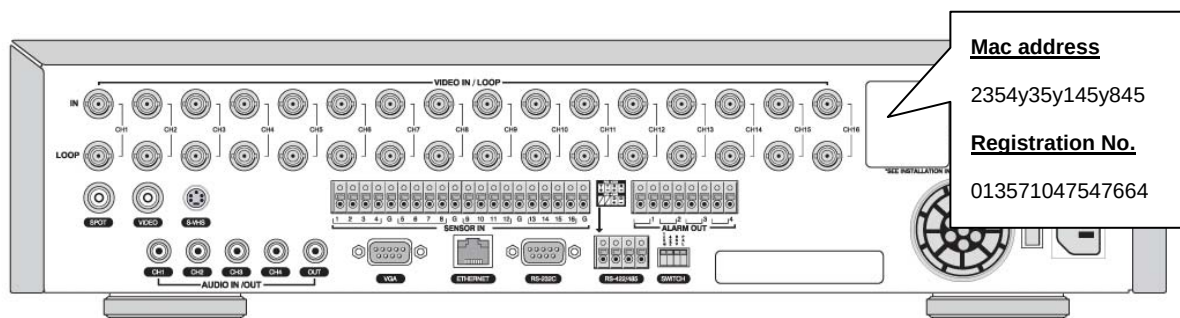

NOTE: If there is not registration No. on the system, please contact the distributor or manufacturer.


1-3. Registration at DDNS.

A. Please login <http://standalone4ch.com> and join member.



Enter an ID (which must be more than 4 and less than 12 characters, alpha and or numerical). Please check your ID with the "[check]" button to make sure the ID you choose is available. Choose your Password (which also must be more than 4 and less than 12 characters, alpha and or numerical). Confirm your (Password). Enter your Name and E-Mail address. The DDNS Service Administer will send a confirmation e-mail to the Subscriber's e-mail address, so please enter your e-mail address correctly.

B. Press Registration and register DVR as bellows,

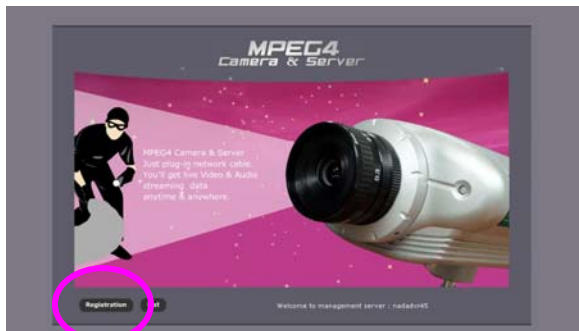

The image shows a screenshot of the "Camera & Server Registration" form. It has a title bar with the text "Camera & Server Registration" and a subtitle "Join our team & get the latest & best software, data, streaming, etc. anytime & anywhere." Below the title bar, there are input fields for "Mac Address", "Registration No.", and "Domain Name". The "Registration No." field is pre-filled with "013571047547664". The "Domain Name" field is pre-filled with "http://standalone4ch.com". There is a "[check]" button next to the "Domain Name" field. Below the input fields, there is a "OK" button.

Input MAC Address and Registration that you checked from the rear of DVR. And input Domain

Name and press [check] to see if Domain name is usable or not.



NOTICE

ID and password of registration DDNS is not the same as “Domain name”.

You may use alpha and numerical characters as well as hyphens for your Domain name. (i.e. [A~Z], [a~z], [0~9] or [-] for your domain name and it is case sensitive).

C. Press List and check the status of registration.

Camera & Server List		
MPEG4 CAMERA & SERVER		
:: My List		[Info change] [Delete]
	Host Name	Status
	http://teleeye.standalone4ch.com	

⌘ elapsed time since last update


	Less than 5 minutes
	5 to 20 minutes
	More than 20 minutes
	No update history

Status	Specification
	Elapsed time since last update is Less than 5 minutes
	Elapsed time since last update is more than 5 minutes and less then 20 minutes
	Elapsed time since last update is more than 20 minutes
	No update history


2. Network access using Domain name

If DDNS registration is successful, you can access your DVR via the provided Network Client S/W.

A. Run Network Client S/W program and click the “connect” button.

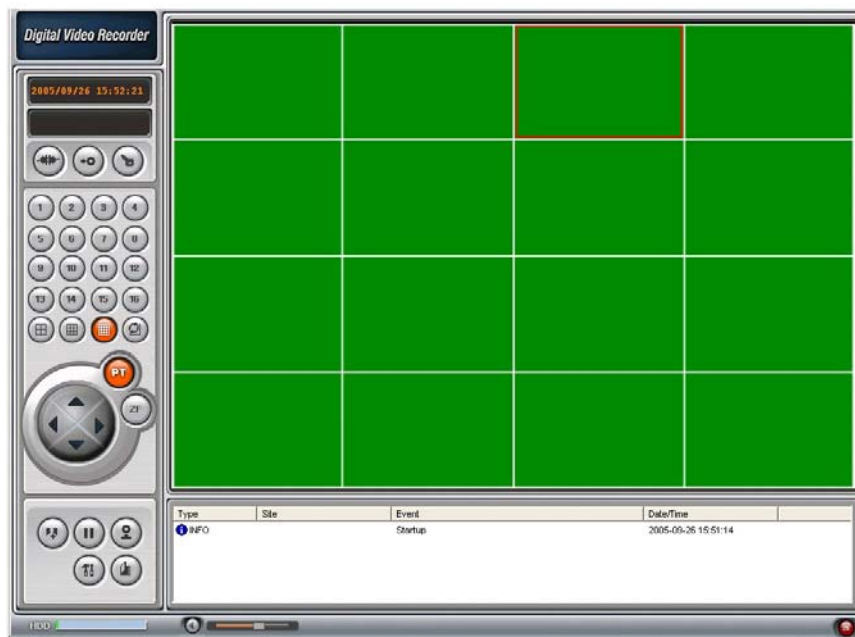

B. Enter your domain name instead of IP address in the “IP Address” field.

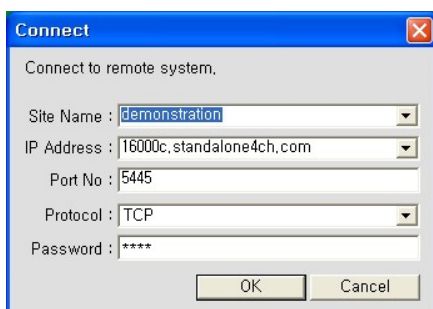

C. Enter the Port no, Protocol and Password in each filed.